

# TOWER®

over 100 YEARS of quality

T19007

## 3-IN-1 ELECTRIC CAN OPENER WITH KNIFE SHARPENER AND BOTTLE OPENER



**3\***  
YEAR  
GUARANTEE

SAFETY AND INSTRUCTION MANUAL  
PLEASE READ CAREFULLY

\*Subject to registering your Extended Guarantee online at [www.towerhousewares.co.uk](http://www.towerhousewares.co.uk).



## Towerbrand

GREAT BRITISH DESIGN, INNOVATION  
AND EXCELLENCE SINCE 1912

Since the turn of the 20th century, Tower has been designing, developing and manufacturing housewares and small appliances used by millions of households throughout the UK and beyond. During the 1960s, the rise in popularity of pressure cooking saw Tower become the UK's largest producer of pressure cookers, right through into the late 1980s. In recent years the Tower brand has been reborn with an exciting and varied range of housewares and electrical appliances that have quickly reinstated the brand's richly deserved status as a household name.

**TOWER**

Visit

[www.towerhousewares.co.uk](http://www.towerhousewares.co.uk)

for more fantastic products.

Thank you for purchasing this appliance from the Tower range.

Please read this manual carefully BEFORE using the appliance for your own safety.

It has been designed to provide many years of trouble-free use.

**There are many benefits to using a Tower 3-IN-1 Can Opener:**

- Magnetic lid holder.
- Easily opens cans.
- Integrated bottle opener.
- Removable lever for easy cleaning.
- Built in knife sharpener.
- Auto-stop safety function.
- Hidden cord storage.

## Contents:

1. **Specifications**  
Components and structure
2. **Technical Data**
3. **Important Safety Information**
4. **Before First Use**
5. **Using your Appliance**
6. **Troubleshooting**
7. **Recycling**
8. **Cleaning & Care**
9. **Wiring Safety**
10. **Warranty Information**
11. **Your Receipt**

See back page for Customer Service Information.

**Call us first, we can help.**

With advice, spares and returns.

Visit our website: [towerhousewares.co.uk](http://towerhousewares.co.uk) Call: +44 (0)333 220 6066  
(8.30am to 6.00pm Monday-Friday)

# 1 - Specifications:

This box contains:  
Instruction Manual  
Can & Bottle Opener



Bottle Opener



Hidden Cord Storage



Knife Sharpener



## Structure of your appliance:

1. Magnet
2. Blade
3. On/Off Button
4. Drive wheel
5. Bottle opener
6. Knife sharpener (back of unit)
7. Cord Storage (back of unit)

## 2 - Technical Data:

Description:	3-in-1 Electric Can Opener
Model:	T19007
Voltage:	220-240V~
Frequency:	50/60Hz
Power consumption:	70W

### Documentation

We declare that this product conforms to the following product legislation in accordance with the following directive(s):

2014/30/EU	Electromagnetic Compatibility Directive.
2014/35/EU	Low Voltage Directive.
2011/65/EU	Restriction of Hazardous Substances Directive.
2009/125/EC	Eco-Design of Energy Related Products.

RK Wholesale LTD Quality Assurance, United Kingdom.

Should you encounter problems or require a replacement part, contact the Tower Customer Support Team: **+44 (0) 333 220 6066**.

Some spare parts may be ordered from the Tower website.  
Your warranty becomes void should you decide to use non Tower spare parts.  
Spare parts can be purchased from **[www.towerhousewares.co.uk](http://www.towerhousewares.co.uk)**

### Guarantee for spare parts:

The spares and accessories are guaranteed for 1 year from date of purchase.  
The main body and housing are guaranteed for the extended free warranty subject to registration.  
If any defect arises due to faulty materials of workmanship, the faulty products must be returned to the place of purchase within 12 months from the date of purchase.  
Refund or replacement is at the discretion of the retailer.

### 3 - Important Safety Information:

Please read these notes carefully BEFORE using your Tower appliance.

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- Please ensure that the appliance is used on a stable, level, and heat resistant surface.
- DO NOT immerse cords, plugs or any part of the appliance in water or any other liquid.
- DO NOT leave the appliance unattended while it is operating.
- Close supervision is necessary when any appliance is used by or near children or pets.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Switch off at the wall socket then remove the plug from the socket when not in use or before cleaning.
- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer or its service agent or a similarly qualified person.
- DO NOT let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- DO NOT use extension cords with the appliance.
- The use of accessory attachments is not recommended by the appliance manufacturer, apart from those supplied with this product.

- DO NOT pull the plug out by the cord as this may damage the plug and/or the cable.
- DO NOT use this product for anything other than its intended use.
- This appliance is for household use only.
- DO NOT carry the appliance by the power cord.
- DO NOT use the appliance outdoors.
- DO NOT let the cord hang over edge of table or counter-top to touch hot surfaces.
- DO NOT open pressurized (aerosol-type) cans.
- DO NOT open cans of flammable liquid such as lighter fluids.
- DO NOT use can opener for other than intended use or leave unattended while in use.
- DO NOT use the can opener to open cans designed to be opened in a different method, such as pull tabs, rolling keys, etc.
- DO NOT use this can opener to open dented cans.
- NOTE: Aluminium lids will not stick to the magnet.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the Customer Support Team: **+44 (0) 333 220 6066**

## 4 - Before First Use

1. Remove your appliance from the packaging.
2. Your appliance is now ready for normal use.
3. Dispose of the packaging in a responsible manner.

## 5 - Using Your Appliance

1. Plug the can opener into a suitable mains socket. Take care to ensure the cable is not bent or kinked before plugging in the appliance.
2. Raise the lever into the upright position.
3. To pierce the can, insert it into the unit so that the lower edge of the can lip rests on top of the drive wheel. Ensure that the cutting edge is on the inside of the can lip.
4. Push the can opener lever down firmly until the can is fully opened by the mechanism. When the can is fully open, the cutting action will automatically stop. The can will remain in position until the lever is raised.
5. To release the can, grasp the can firmly in one hand and raise the lever with the other hand. The magnetic lid holder will retain the lid.

**CAUTION! When removing the lid there may be some sharp edges. Do not touch them to avoid injury.**

### Jammed Cans:

To open a can that has become jammed, raise the can opener lever and release the can. Begin the cutting action again in a new place on the can lip.

### Using The Knife Sharpener:

1. Ensure the knife is clean and free of grease.
2. Place the heel of the knife into the guide slot located on the back of can opener.

**CAUTION! To prevent the risk of injury, ALWAYS take care to ensure your fingers are out of the way of the blade when sharpening.**

**CAUTION! The blade is very sharp. Take extreme care when handling the knife and blade.**

**Note:** It may help for the knife sharpener to be placed on its front while in use.

3. Press the lever down and lightly draw the blade towards you, applying slight downward pressure.

**Note:** Do not let the knife cut into the body of the can opener.

4. Repeat this procedure six to seven times to sharpen the knife. Do not attempt to sharpen hollow ground blades or those with serrated edges. The grinding wheel may jam if too much pressure is applied on the knife. Lift the knife slightly to release the wheel.



### Using The Bottle Opener:

1. Ensure the bottle cap is clean.
2. Hold the bottle and put the cap into the metal hooks.
3. Pull the bottle down to remove the cap.

**Note:** The bottle opener will only remove metal bottle caps. When opening tall bottles, the unit should be used towards the edge of a work top. Do not use the unit to open bottles with a screw-off cap or pull ring.

## 6 - Troubleshooting

Problem	Cause	Solution
The unit is not working	The unit is not plugged in.	Plug the unit into an active mains socket, ensuring the socket switch is in the ON position.
The can opening function is not working correctly.	The can is not correctly positioned within the unit. The can is dented or damaged.	Ensure the can is correctly positioned against the drive wheel. DO NOT use dented or damaged cans with the appliance.
The knife sharpening function is not working correctly.	The knife is not correctly positioned within the unit.	Position the knife correctly against the grinding blade.

### **WARNING:**

Do not immerse any electrical part of the appliance in water such as motor units or plugs.  
Please see cleaning section for further instructions.

## 7 - Recycling

### DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) or [www.recyclenow.co.uk](http://www.recyclenow.co.uk) for access to information about the recycling of electrical items.

Please visit [www.weeeiireland.ie](http://www.weeeiireland.ie) for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill.

Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



## 8 - Cleaning & Care

- Before cleaning, unplug the cord from outlet.
- The removable blade assembly should be detached and cleaned thoroughly in warm, soapy water. Refer to the section below for instructions on how to detach the blade assembly from the unit.
- Do not immerse the motor housing in water.
- Clean the drive wheel by wiping it with a damp cloth.

**Note:** This item is not dishwasher-safe.

**Note:** Do not immerse the body part of can opener into water.


### How To Clean The Blade Assembly:

1. Unplug the cord from the mains outlet. Lift the lever to the vertical position. Hold the can opener and ease the cutting assembly out of the case. Wash in hot, soapy water. Rinse and dry.
2. Before replacing the cutting lever, wipe the can opener housing and the area around the drive wheel with a slightly damp cloth or sponge. To remove stubborn spots, wipe the surfaces with a nylon cloth or mesh pad and sudsy water, following with a clean, damp cloth. Dry thoroughly. Do not use abrasive cleaners on any part of the can opener as it may damage the finish.
3. To replace the blade assembly, hold the lever in a vertical position, insert the shaft into the keyhole and push the lever in all the way. Rotate the lever clockwise until it is horizontal. If the lever is in the correct position, it cannot be removed from the can opener when in the horizontal position.

**CAUTION! The blade is very sharp. Take extreme care when handling the knife and blade.**

**Hint:** The cutting mechanism may collect food or paper from can labels and should be washed frequently.


## 9 - Wiring Safety for UK Use Only

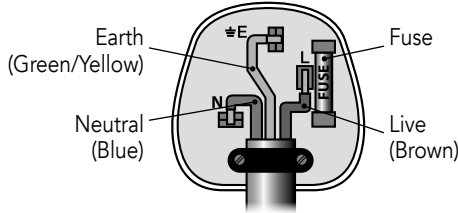

### IMPORTANT

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are labelled in accordance with the following code:

Blue neutral [N] Brown live [L]  
Green/Yellow [EARTH] 

#### Plug Fitting Details (Where Applicable).

The wire labelled blue is the neutral and must be connected to the terminal marked [N].

The wire labelled brown is the live wire and must be connected to the terminal marked [L].

The wire labelled green/yellow must be connected to the terminal marked with the letter [E].

On no account must either the brown or the blue wire be connected to the [EARTH] terminal.

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

#### Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - disconnect it from the mains - then cut it off of the mains lead and immediately dispose of it in a safe manner. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**WARNING:**  
This appliance **MUST** be earthed!

## 10 - Warranty



As a thank you for purchasing one of our fantastic products, we are offering you an extra 2 years peace of mind in addition to your 1 year guarantee.

To receive your extra 2 year guarantee, register your appliance online within 28 days of purchase by visiting [www.towerhousewares.co.uk](http://www.towerhousewares.co.uk)



This product is guaranteed for 12 months from the date of original purchase. If any defect arises due to faulty materials or workmanship, the faulty products must be returned to the place of purchase. Refund or replacement is at the discretion of the retailer.

### The Following Conditions Apply:

- The product must be returned to the retailer with proof of purchase or a receipt.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, cosmetic damage, misuse or consumable parts.
- Tower has limited liability for incidental or consequential loss or damage.

This guarantee is valid in the UK and Eire only.

The standard one year guarantee is only extended to the maximum available for each particular product upon registration of the product within 28 days of purchase. If you do not register the product with us within the 28 day period, your product is guaranteed for 1 year only.

To validate your extended warranty, please visit [www.towerhousewares.co.uk](http://www.towerhousewares.co.uk) and register with us online.

Please note that length of extended warranty offered is dependent on product type and that each qualifying product needs to be registered individually in order to extend its warranty past the standard 1 year.

Extended warranty is only valid with proof of purchase or receipt.

# 11 - Your Receipt

Affix your store receipt to this page for safe keeping.

# Notes

# Notes

# TOWER®

*over 100 YEARS of quality*

## *thank you!*

We hope you enjoy your appliance for many years. As a thank you for purchasing one of our fantastic products, we are offering you an extra 2 years peace of mind.

\*To receive your extra 2 years guarantee, register your appliance online within 28 days of purchase by visiting:

**[www.towerhousewares.co.uk](http://www.towerhousewares.co.uk)**

Should you have a problem with your appliance, or need any spare parts, please call our Customer Support Team:

**+44 (0) 333 220 6066**

Your warranty becomes void should you decide to use non Tower spare parts. Spare parts can be purchased from **[www.towerhousewares.co.uk](http://www.towerhousewares.co.uk)**

