



Wiring Safety for UK Use Only

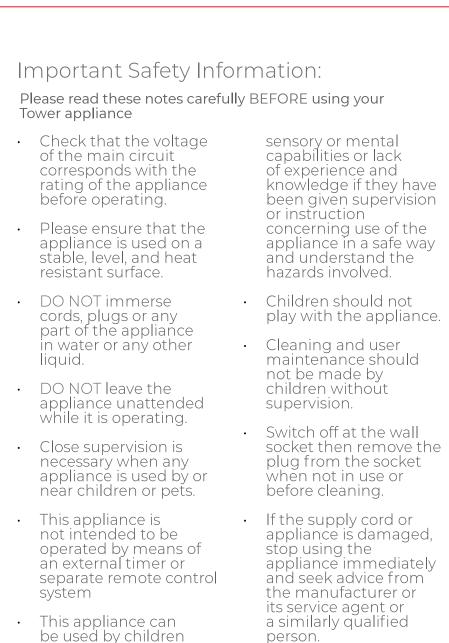

aged from 8 years and

with reduced physical,

above and persons

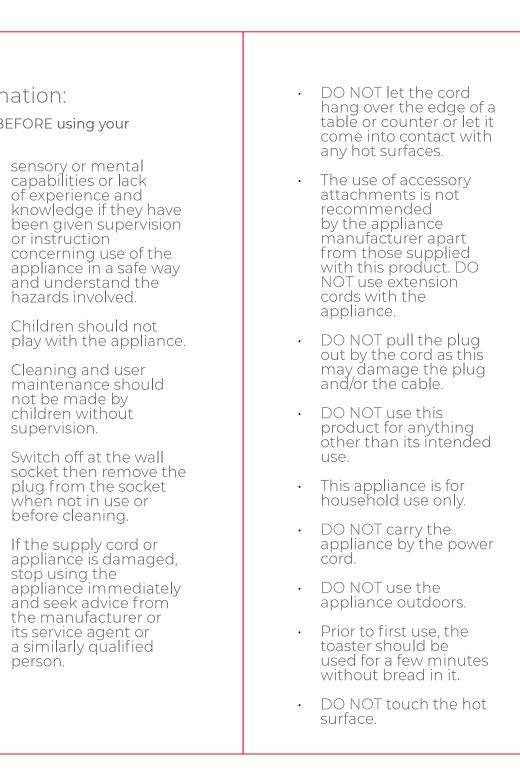

 DO NOT let the cord
 Use only pre-sliced come into contact with · DO NOT insert oversized foods, metal foil packages, or metal utensils into the toaster. This may result in electric shock. DO NOT use the toaster near curtains, upholstery or other decorative fabrics, as they can easily catch fire and cause a safety hazard. DO NOT remove food from the toaster while the push lever is down or remove the crumb tray while the toaster is plugged in. Disconnect from power supply, wait for it to cool and then remove the crumb tray. The temperature of accessible surfaces may be high when the appliance is operating. In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the Customer Support +44 (0) 333 220 6066

Remove all packaging materials, including those that may be inside the toasting slots or toasting lever slots.

Wipe the exterior with a damp cloth. Dry thoroughly. Do not use abrasive cleaners.

Do not put the toaster, cord or plug in water.

Make sure the crumb tray is securely locked into place and the toasting lever is in the Up position. Make sure the crumb tray is securely locked into place and the toasting level is in the Opposition.
 Unwrap the power cord from the cord storage area on the underside of the toaster and plug into a 220-240V AC outlet.
 Turn the browning selector dial to the lightest setting.
 Lower the toasting lever until it locks into place. Operate without bread once or twice to burn off any manufacturing residue. You may notice a light amount of smoke; this is normal and will stop as the heating elements continue to heat stop as the heating elements continue to heat. Using Your Appliance: Automatic Centring Guides: Lowering the toasting lever closes the centring guides and holds the bread or food to be toasted centrally in the toasting slots. NOTE: The toasting lever will not lock down unless the toaster is plugged into an electrical outlet. Make sure the crumb tray is securely locked into place and the toasting levers are in the Up Make sure the crumb tray is securely locked into place and the toasting levers are in the Up position.
 Make sure no bread or other objects are inside the toasting slots.
 Place the toaster on a flat, level, heat resistant surface.
 Plug the power cord into a mains outlet.
 Position the browning selector dial to the desired setting. To test toasting times for browning, it is best to use both toasting slots and position the browning selector dial between 3 and 4, and then adjust each subsequent toasting to your preference.
 Remove all protective wrappings from food before placing it into the toasting slots.
 Insert bread or foods suitable for toasting into the toasting slots.
 Lower the toasting lever until locked into place. The automatic centring guides hold food upright for uniform side-to-side toasting. When the bread is lowered into position, toasting will begin. begin.
When the toast reaches the selected browning level, it will pop up automatically.
Remove the bread from the toasting slot. Be careful when removing the bread, as the bread and the top of the toaster will still be hot.
To interrupt toasting, press the corresponding CANCEL button. NEVER attempt to interrupt toasting by lifting the carriage handle.
Unplug the cord from the wall outlet when not in use. Buttons: Reheat Buttons: These buttons allow you to reheat your food without any extra browning or toasting.
These buttons allow you to defrost and toast frozen bread.
These buttons allow you to stop the toasting process.

DO NOT change the browning level setting during the toasting cycle. First press the CANCEL button; then turn the browning selector dial to adjust the browning level. Lower the toasting lever and toast until the desired toast colour is achieved. IMPORTANT: Never use a fork or sharp-edged utensil to remove toast, as that may damage the heating element or cause injury.

Troubleshooting:

Questions Answers Why is there a burning smell Unplug the toaster and allow it to cool.

Crumbs in the crumb tray may be causing the burning smell. Remove section of this manual for instructions on how to remove the crumb tray. There may be food debris caught in the heating element. Check inside and gently pry the crumbs out. Why won't my toast Your bread may be too soft. Try using bread that is slightly thicker or less The browning dial will There may be crumbs stuck in the socket. Unplug the toaster and try not operate. shaking it to dislodge any debris.

If the browning dial still does not work, contact our Customer Support

Cleaning & Care: NOTE: Unplug the appliance from the mains and let it cool down completely before attempting to Do not immerse any part of the toaster in water or any other liquid.

Clean the toaster regularly. This appliance contains no user serviceable parts and requires little maintenance. Leave any servicing or repair to qualified personnel.

Be sure to empty and clean the crumb tray regularly. To do this, press it slightly inwards to release the locking latch, then slide it out from underneath the toaster. Dispose of the crumbs, then slot the tray back into place and push it inwards until it clicks into place.

Unplug the toaster and allow it to cool completely before cleaning.

To clean, wipe the exterior with a slightly dampened soft cloth or sponge and dry with a cloth or paper towel. Do not use strong cleaners or abrasives that may scratch the surface, and never spray cleaners directly onto the toaster.

To dispose of crumbs which may have remained lodged inside the toaster, turn it upside down over

To dispose of crumbs which may have remained lodged inside the toaster, turn it upside down over a sink or drain and shake it vigorously until the crumbs come free.

