

TOWER

over 100 YEARS of quality

CAVALETTO

500ML PERSONAL BLENDER

T12060

Applicable to
all colour variants

POWERFUL
**300W
MOTOR**

SOFTTEX
NON-SLIP
SOFT TOUCH
COATING

DURABLADE
LONG-LIFE
STAINLESS
STEEL
BLADES

**BPA
FREE**
500ml
BOTTLE



Call us first, we can help.

With advice, spares and returns.

Visit our website: **Call: +44 (0)333 220 6066**
towerhousewares.co.uk (8.30am to 6.00pm Monday-Friday)

3*
YEAR
GUARANTEE

SAFETY AND INSTRUCTION MANUAL

PLEASE READ CAREFULLY

*Subject to registering your Extended Guarantee online at www.towerhousewares.co.uk.

Specifications:

This box contains:

Instruction Manual
Personal Blender

1. Snap Fastener
2. Blending Bottle Cap
3. 550ml Plastic Blending Bottle
4. Blending Bottle Base with Blade
5. Main Body (Motor Base)
6. Power Switch Control Dial with 2 Speeds and Pulse Function
7. Base Cord Storage
8. Plastic Feet



Technical Data:

Description:	Personal Blender
Model:	T12060 applicable to all colour variants
Rated Voltage:	220-240V~
Frequency:	50-60Hz
Power consumption:	300W



DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill.

Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



Important Safety Information:


Please read these notes carefully BEFORE using your Tower appliance

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- Please ensure that the appliance is used on a stable, level, and heat resistant surface.
- DO NOT immerse cords, plugs or any part of the appliance in water or any other liquid.
- DO NOT leave the appliance unattended while it is operating.
- Close supervision is necessary when any appliance is used by or near children or pets.
- This appliance can be used by children aged 8 years and above, as well as persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should not play with the appliance.
- Cleaning and user maintenance should not be made by children without supervision.
- Switch off at the wall socket then remove the plug from the socket when not in use, before moving or before cleaning the appliance.

- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer or its service agent or a similarly qualified person.
- DO NOT let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- The use of attachments is not recommended by the appliance manufacturer apart from those supplied with this product.
- DO NOT pull the plug out by the cord as this may damage the plug and/or the cable.
- DO NOT use this product for anything other than its intended use.
- This appliance is for household use only.
- DO NOT carry the appliance by the power cord.
- DO NOT use any extension cord with this appliance.
- DO NOT use the appliance outdoors.
- Switch off and unplug before fitting or removing tools/ attachments, after use and before cleaning.
- Avoid contact with moving parts. Keep hands and utensils out of the blender bottle while blending to prevent personal injury or damage to the appliance. The blade is sharp. Handle with care.
- Never let the power unit, cord or plug get wet.
- DO NOT attempt to bypass the interlock system that powers the unit on.
- Always operate on a flat surface.
- CAUTION! Take care when handling the sharp cutting blades, emptying the bottle and during cleaning.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
- DO NOT operate the appliance with wet hands.
- Take special care when preparing food for babies, the elderly and infirm.
- Always ensure that the blender bottle is thoroughly sterilized.

- Never put hot oil or fat into the bottle. Please follow the processing guide.
- Never let anybody trip over the power cord and attached cable. DO NOT let the cord touch hot surfaces or hang down where a child could grab it.
- The capacity of the ingredient should not exceed the maximum level of the bottle.
- The appliance should be run for no longer than 3 minutes. After this time, allow the blender to cool down to room temperature before restarting.
- Operating beyond the recommended period may cause the motor to overheat. If the surface of the appliance has been very hot, it may need time to cool down. Allow the unit to cool down to room temperature and then the appliance can be used again.
- DO NOT use the appliance to blend ingredients that may be too hard for the motor and blades.
- DO NOT exceed the quantities and maximum time indicated in the operation guidelines or processing guide.
- DO NOT operate the appliance when the bottle is empty, to prevent overheating and a potential fire hazard.
- DO NOT use the appliance in direct sunlight or near heating appliances (heaters, stoves, ovens etc.).
- DO NOT place on top of another appliance.
- DO NOT blend hot or boiling foods. Always allow hot or boiling foods to cool down first before adding them to the bottle and processing them.
- Avoid coming into contact with moving parts.
- Keep fingers, hair, clothing and utensils away from the moving parts.
- CAUTION! To reduce the risk of injury, never place the assembly blades onto the base without the bottle properly attached.
- This appliance must be used ONLY according to the instructions.
- Ensure that the control dial is in the OFF '0' position before plugging into the power outlet.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the Customer Support Team.

Wiring Safety for UK Use Only

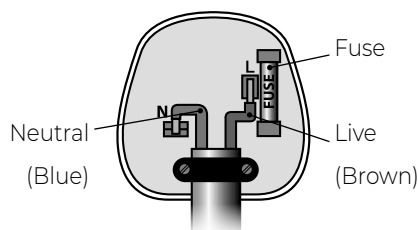


IMPORTANT

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue neutral [N] Brown live [L]

Plug Fitting Details (Where Applicable).

The wire coloured blue is the neutral and must be connected to the terminal marked [N] or coloured black. The wire coloured brown is the live wire and must be connected to the terminal marked [L] or coloured red. On no account must either the brown or the blue wire be connected to the [EARTH] terminal .

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-Rewireable Mains Plug.

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug – disconnect it from the mains – and then cut it off of the mains lead and immediately dispose of it in a safe manner. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

WARNING:


This appliance is double insulated.
Do not connect any wire to the earth terminal.

Before First Use:

Read all instructions and safety information carefully before first use. Please retain this information for future reference.

1. Remove your appliance from the packaging.
2. Before using the appliance for the first time, carefully clean the lid, bottle and blade unit.
3. DO NOT use any aggressive detergents, brushes with metal or nylon bristles or sharp objects for cleaning the unit.
4. Your appliance is now ready for normal use.
5. Dispose of the packaging in a responsible manner.

Using Your Appliance:

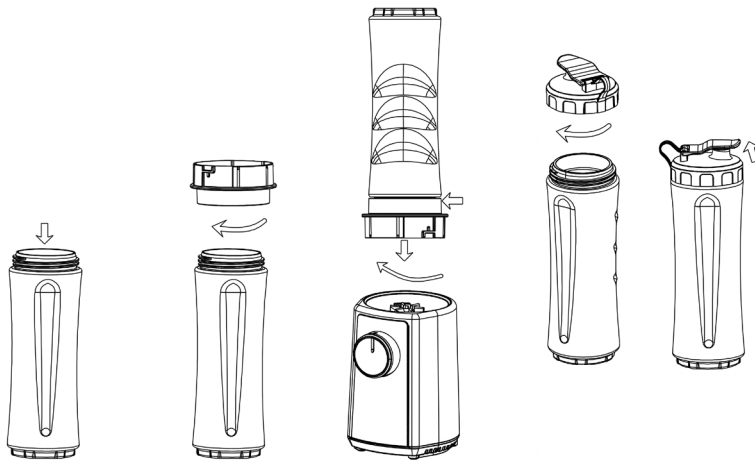

1. Place the ingredients into the blending bottle.
2. Screw the blending bottle base on to the bottle, turning clockwise to tighten.
3. Place the blending bottle assembly onto the motor base and rotate clockwise until there is an audible click confirming it is locked in to position. The markings on the motor base and the bottle should be aligned.
4. Plug the unit in to a mains socket.
5. Turn the control dial to the desired speed – '1', '2' or PULSE.

Note: The PULSE speed is equivalent to speed '2' and the unit operates for as long as the control dial is held in this position. The unit will operate at Speed '1' or '2' continuously until the control dial is turned to a different position or turned to OFF '0'.

6. Once the ingredients are sufficiently blended turn the control dial to OFF '0'.
7. Switch off the appliance at the socket, unplug and disassemble the unit.

▲ WARNING: The continuous operating time must not exceed 3 minutes.

To Disassemble The Appliance:

1. Turn the blending bottle anti-clockwise to remove from the motor base.
2. Turn the blending bottle upside down and unscrew the blending bottle base, anti-clockwise.
3. Pour out the contents. Alternatively, retain the mixture in the bottle and screw the blending bottle cap clockwise onto the blending bottle. Push up the snap fastener on the lid to open the outlet to drink directly from the bottle or pour out as required.

▲ CAUTION: If the blender becomes blocked, turn the control dial to OFF '0', switch off at the wall socket and unplug before disassembling and clearing the blades.

Processing Guide:

Processing Task	Food	Suggested Setting	Suggested Processing Procedure
Aerating	Milkshakes, smoothies	1, 2 and Pulse	Use chilled milk. Blend it until desired consistency is achieved
Creaming	Butter	1	Blend butter until creamed. DO NOT OVERPROCESS
Emulsifying	Salad dressing	1	Blend until well combined
Mixing	Batters	1, 2 and Pulse	Process ingredients until just combined DO NOT OVERPROCESS
Pureeing	Soups, vegetables, fruits	2	Blend until smooth

Tips:

- Cut food items for blending into cubes (approximately 1-2cm), this will assist in achieving an even result.
- Never fill the Blending bottle above the maximum level indicated.
- When pureeing fruit or vegetable, cooked or raw, cut into small pieces to facilitate blending.
- Always ensure stones are removed from fruit as these can harm the blades.
- Do not process hot liquids in your blender. Allow it to cool before processing.
- All the ingredients and foods must be below 40° Centigrade.

Troubleshooting:

Problem	Possible Cause	Solution
The motor does not operate.	The safety lock is not connected.	Reassemble the blender bottle and connect to the base correctly.
There is a smell coming from the motor/ The motor is becoming hot.	There is too much food in the bottle or the motor has been running for too long.	Reduce the food and run it again after the unit has cooled down.
The liquid too thick.	There is too much food in the bottle or insufficient liquid.	Reduce the amount of ingredients added to the blender bottle. Add more liquid. Ensure that the maximum limit is not exceeded.

Cleaning & Care:

1. Unplug the appliance base and detach the accessories.
2. Half fill the blending bottle with warm, soapy water.
3. Assemble the bottle and attach to the motor base unit, as described in the Using Your Appliance section.
4. Press and hold the PULSE function for 1-2 seconds and release. Repeat 3-4 times.
5. Remove the blending bottle and empty and rinse.
6. For thorough cleaning, wash the blending bottle and blending bottle cap again, in the dishwasher or in warm soapy water.
7. Wash the blending bottle base under running water, with the blades facing upwards. DO NOT flush water through from the underside of the base.

⚠ CAUTION: Take care when cleaning the blades as they are extremely sharp.

8. Wipe the motor unit with a damp cloth (with a little detergent if required).
9. Do not immerse the motor unit in water or other liquids.
10. Make sure that the appliance is cleaned after every use.
11. Allow to dry fully after cleaning, before using again.

NOTE: DO NOT use scouring pads, steel wool, any form of strong solvents or abrasive cleaning agents to clean the appliance; they may damage the outside surfaces of the appliance.

▲ IMPORTANT: Allow all parts to dry fully after cleaning before using again. Do not use the appliance if damp.

▲ WARNING:

DO NOT immerse any electrical part of the appliance in water such as motor units or plugs.
Please see cleaning section for further instructions.

To store your appliance:

1. Unplug the power cord from the power outlet and clean as above.
2. Allow the appliance to dry fully.
3. Coil the power cord around the cord storage at the bottom of the motor base.
4. Store in a cool, dry place out of reach of children.

NOTES

NOTES

TOWER®

over 100 YEARS of quality



CAVALETTO

thank you!

We hope you enjoy your appliance for many years.

This product is guaranteed for 12 months from the date of original purchase. If any defect arises due to faulty materials or workmanship, the faulty products must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

The Following Conditions Apply:

The product must be returned to the retailer with proof of purchase or a receipt. The product must be installed and used in accordance with the instructions contained in this instruction guide.

It must be used only for domestic purposes.

It does not cover wear and tear, damage, misuse or consumable parts.

Tower has limited liability for incidental or consequential loss or damage.

This guarantee is valid in the UK and Eire only.

The standard one year guarantee is only extended to the maximum available for each particular product upon registration of the product within 28 days of purchase. If you do not register the product with us within the 28 day period, your product is guaranteed for 1 year only.

To validate your extended warranty, please visit
www.towerhousewares.co.uk and register with us online.

Please note that length of extended warranty offered is dependent on product type and that each qualifying product needs to be registered individually in order to extend its warranty past the standard 1 year.

Extended warranty is only valid with proof of purchase or receipt.

Your warranty becomes void should you decide to use non Tower spare parts.

Spare parts can be purchased from

www.towerhousewares.co.uk

Should you have a problem with your appliance, or need any spare parts, please call our Customer Support Team on:

+44 (0) 333 220 6066

