

T17070 All Colour Variants

1.5L DEEP FAT FRYER (ADDENDUM)

Attaching the Frying Basket Handle:

The fryer is equipped with a removable handle for the frying basket.

1. To assemble the frying basket handle, squeeze the metal rods of the handles together and slot each of them into one of the corresponding notches on the edge of the basket, as shown in the images below.
2. Once each rod is correctly positioned within its corresponding notch, pull the handle back firmly until it is secured into place, as shown in the images below.
3. To remove the handle, simply push the handle forward until it detaches, then squeeze the two rods together to release them from the holding notches.

