

TOWER

over 100 YEARS of quality



CAVALETTO

T13019

Applicable to All Colour Variants

4-IN-1 MILK FROTHER

**PERFECT
MILK
FOAM IN
90 SECS**

**360°
CORDLESS
BASE**

**AUTO
SWITCH
OFF
SYSTEM**

**EASY
CLEAN
NON-STICK
COATING**



Call us first, we can help.

With advice, spares and returns.

Visit our website: **Call: +44 (0)333 220 6066**
towerhousewares.co.uk (8.30am to 6.00pm Monday-Friday)



**SAFETY AND INSTRUCTION MANUAL
PLEASE READ CAREFULLY**

*Subject to registering your Extended Guarantee online at www.towerhousewares.co.uk.

Specifications

This box contains:

Instruction Manual
Milk Frother

1. Transparent Jug Cover
2. Cordless Jug
3. Handle
4. 360° Base
5. Frothing Paddle
6. Function Button
7. Power ON/OFF Button

LED Indicators


8. Warm milk with a thick froth
9. Warm milk with a thin froth
10. Warm milk without froth
11. Cold milk with froth



Technical Data:

| | |
|--------------------|--|
| Model: | T13019 Applicable to all colour variants |
| Rated Voltage: | 220 - 240V~ |
| Frequency: | 50-60Hz |
| Power Consumption: | 500W |

Wiring Safety for UK Use Only

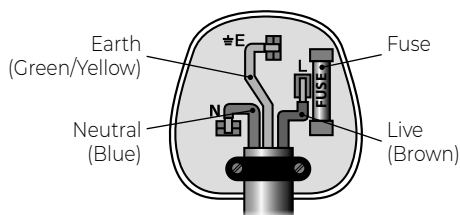

IMPORTANT

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are labelled in accordance with the following code:

Blue neutral [N] Brown live [L] Green/Yellow [EARTH]

Plug Fitting Details (Where Applicable).

The wire labelled blue is the neutral and must be connected to the terminal marked [N].

The wire labelled brown is the live wire and must be connected to the terminal marked [L].

The wire labelled green/yellow must be connected to the terminal marked with the letter [E].

On no account must either the brown or the blue wire be connected to the [EARTH] terminal. Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same

rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-Rewireable Mains Plug.

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - disconnect it from the mains - then cut it off of the mains lead and immediately dispose of it in a safe manner. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

WARNING:

This appliance **MUST** be earthed!

DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill.

Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



Important Safety Information:

Please read these notes carefully BEFORE using your Tower appliance

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- To protect against fire, electric shock and injury to persons do not immerse the appliance, cord or plug in water or any other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before attaching or removing parts, and before cleaning the appliance.
- DO NOT operate any appliance with a damaged cord or plug or after the appliance malfunctions, is dropped or has been damaged in any manner. Return the appliance to an authorised service facility for examination, repair or adjustment.
- The use of an accessory not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- DO NOT use outdoors.
- Place the appliance on a firm, stable, heat resistant surface.
- DO NOT let the cord hang over edge of table or counter, or touch a hot surface.
- DO NOT place on or near hot surfaces, a hot gas or electric burner, or in a heated oven.
- DO NOT use the appliance for anything other than its intended use. The appliance is only for frothing and heating milk.
- When disconnecting the appliance and removing the plug from the wall outlet always hold the plug, never pull the cord.

- Some parts of the appliance are hot when operated; DO NOT touch hot surfaces. Use handles or buttons only.
- This appliance can be used by children aged 8 years and above and by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Cleaning and user maintenance should not be undertaken by children younger than 8 years old or unsupervised.
- Children should be supervised to ensure that they do not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years old.
- DO NOT let the appliance operate without milk.
- Take extreme caution when moving an appliance containing hot liquid.
- Always operate the appliance with the cover in place.
- This appliance is intended for household use only.
- CAUTION: This appliance emits steam which can cause scalding.
- Keep hands and utensils out of the container while operating to reduce the risk of severe injury to persons or damage to the appliance. Avoid contact with moving parts.
- This appliance is fitted with a short power-supply cord. Longer detachable power-supply cords or extension cords may be used if care is exercised in their use, to prevent risks resulting from entanglement or a trip hazard. The longer cord should be arranged so that it does not drape over the counter top or table top where it can be pulled on by children or tripped over.

- If a long detachable power-supply cord or extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the Customer Support Team:
+44 (0) 333 220 6066

Before First Use:

Read all instructions and safety information carefully before first use. Please retain this information for future reference.

1. Remove the appliance from the packaging.
2. Check all components are present.
3. Clean the appliance according to the 'CLEANING & CARE' section, then reassemble it.
4. The appliance is now ready for normal use.
5. Dispose of the packaging in a responsible manner.

Using Your Appliance:

Milk Capacity

Always follow the maximum/ minimum markings inside the jug according to the function required:

Frothing milk 150ml MAXIMUM milk capacity
(Applies to both thick and thin froth and hot and cold milk)

75ml MINIMUM milk capacity

Warming milk 300ml MAXIMUM milk capacity
75ml MINIMUM milk capacity

Operation:

1. Remove the jug cover and insert the frothing paddle onto the shaft on the bottom of the jug.
2. Fill the jug with the required amount of milk (and in accordance with the milk capacity instructions above) and replace the cover.

Note: Use whole milk (within a temperature range of 5-10°C for warming milk)

3. Connect the plug into a power outlet.
4. Press the Function button as required and the corresponding LED indicator will illuminate:

ONCE

Warm milk with a thick froth 

THREE TIMES

Warm milk without froth 

TWICE

Warm milk with a thin froth 

FOUR TIMES

Cold milk with froth 

5. Press the ON/OFF button once. The appliance will start to work. If frothing, the frothing paddle will rotate. If warming, the heating element will activate.

Note: Press the ON/OFF button while the unit is in use to stop operation.

6. Once the temperature of milk has achieved the setting value, the appliance will stop working.
7. When the appliance has stopped working, remove the jug cover and pour out the milk.

CAUTION: A minimum of 3 minutes rest time must be maintained between two continuous cycles. The appliance will enter self-protection mode automatically after operating for 5 cycles continuously. The working indicator will flash and the switch button will not be activated. After approximately 5 minutes the appliance will enter standby mode and operation of the appliance can continue.

Note: Between two continuous uses, clean the jug as instructed in the "CLEANING & CARE" section.

8. Turn off the appliance and disconnect the power supply when not use.

Cleaning & Care:

Clean and maintain the appliance after each use.

CAUTION! Always unplug the unit and let it cool down completely before cleaning. To protect against electrical shock, do not immerse the cord, plug, base unit or jug in water or any other liquid.

CAUTION! No parts of this product are dishwasher safe.

1. DO NOT clean with abrasives, alcohol or solvent cleaners.
2. Wash the jug cover and paddle in mild, soapy warm water and rinse.
3. Wash the inside of the jug with mild soapy, warm water and then wipe clean with a soft damp cloth. DO NOT immerse the jug in water.
4. Wipe the external surfaces of the unit with a soft, damp cloth.
5. Dry all parts thoroughly.
6. Replace all parts before attempting to use the appliance again.

Storage:

Ensure the appliance is clean and dry and stored in a cool, dry place out of reach of children.

Spares:

TI3019RG01

Lid

TOWER®

over 100 YEARS of quality



CAVALETTO

thank you!

We hope you enjoy your appliance for many years.

This product is guaranteed for 12 months from the date of original purchase. If any defect arises due to faulty materials or workmanship, the faulty products must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

The Following Conditions Apply:

The product must be returned to the retailer with proof of purchase or a receipt. The product must be installed and used in accordance with the instructions contained in this instruction guide.

It must be used only for domestic purposes.

It does not cover wear and tear, damage, misuse or consumable parts. Tower has limited liability for incidental or consequential loss or damage.

This guarantee is valid in the UK and Eire only.

The standard one year guarantee is only extended to the maximum available for each particular product upon registration of the product within 28 days of purchase. If you do not register the product with us within the 28 day period, your product is guaranteed for 1 year only.

To validate your extended warranty, please visit
www.towerhousewares.co.uk and register with us online.

Please note that length of extended warranty offered is dependent on product type and that each qualifying product needs to be registered individually in order to extend its warranty past the standard 1 year.

Extended warranty is only valid with proof of purchase or receipt.

Your warranty becomes void should you decide to use non Tower spare parts.

Spare parts can be purchased from
www.towerhousewares.co.uk

Should you have a problem with your appliance, or need any spare parts, please call our Customer Support Team on:

+44 (0) 333 220 6066

