

TOWER®

over 100 YEARS of quality

MODEL: T17101

7 LITRE

7 IN 1 AIR FRYER WITH STEAMER



USER MANUAL



GREAT BRITISH DESIGN, INNOVATION AND EXCELLENCE SINCE 1912

TABLE OF CONTENTS

THIS BOX CONTAINS	3
SPECIFICATIONS	3
IMPORTANT SAFETY INFORMATION	4
• General safety	4
• Plug and cord	5
• Wiring safety	6
GETTING TO KNOW YOUR AIR FRYER	7
• Control panel and display	7
• Structure of your appliance	8
BEFORE FIRST USE	9
• Preparing for use	9
• Air fryer drawer safety switch	9
• Turning on the appliance	9
• Auto-off function	9
USING YOUR AIR FRYER	10
• Selecting a cooking mode	10
• Air frying mode	10
• Steam mode	10
• Combo cook	11
• Filling the water tank	11
• Setting the temperature/time	12
WEIGHTS & MEASURES TABLE	13
AIR FRY MODE SETTINGS TABLE	14
STEAM MODE SETTINGS TABLE	15
ACCESSORIES / SPARE PARTS	16
CLEANING AND CARE	17-18
TROUBLESHOOTING	19-21
DISPOSAL OF THE UNIT / CUSTOMER SUPPORT	22
RECIPES	23-27

THIS BOX CONTAINS

Instruction Manual
7L Digital Steam Air Fryer
Removable Grill Plate



SPECIFICATIONS

RATED VOLTAGE	AC 220 - 240V~
FREQUENCY	50/60Hz
POWER CONSUMPTION	1700W
CAPACITY	7 Litre
TEMPERATURE RANGE	80°C - 200°C
TIME RANGE	1-60 minutes
DIMENSIONS (MM)	H: 387 x W 319 : x D: 427mm
WEIGHT	7.2Kg

IMPORTANT SAFETY INFORMATION

Please read these safety **NOTES** carefully **BEFORE** using your Tower appliance.

These warnings have been provided in the interest of safety. Basic safety precautions should always be followed including the following:

KEY SAFETY POINTS

CAUTION: During operation:

- Surfaces are hot. **DO NOT** touch the hot surfaces.
- Hot steam is released through the air outlet openings. Keep your hands and face at a safe distance from the steam and from the air outlet openings.
- Hot steam and air may escape when the appliance drawer is opened.

GENERAL SAFETY

- **DO NOT** immerse cords, plugs or any part of the appliance in water or any other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Children should not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Cleaning and user maintenance should not be undertaken by children without supervision.
- Take care when any appliance is used near pets.
- Switch off and unplug before fitting or removing accessories, after use and before cleaning.
- Allow the appliance to cool down for approximately 30 minutes before fitting or removing accessories or cleaning.
- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer, its service agent or a similarly qualified person.
- The use of accessory attachments is not recommended by the appliance manufacturer, apart from those supplied with this product.
- **DO NOT** use the appliance outdoors.
- **DO NOT** place the appliance on or near a hot stove top or heated oven.
- Take care when moving the appliance, or removing accessories and food as hot oil or other hot liquids may be present.
- This appliance is for household use only.
- **DO NOT** place anything on top of the appliance.
- **DO NOT** clean the appliance with metal kitchen utensils, caustic or abrasive cleaning agents or scouring sponges.
- **DO NOT** use this appliance for anything other than its intended use.

It is important that this instruction manual is retained for future reference.

If the appliance is given to someone else, it should always be accompanied by these operating instructions, as they form an integral part of the appliance.


WHILST AIR FRYING

- Please ensure that the appliance is used on a stable, level, and heat resistant surface.
- **DO NOT** place the appliance on or near combustible materials such as a tablecloth or curtain.
- **DO NOT** place the appliance against a wall or against other appliances. Leave at least 10cm free space on the back and sides and 10cm free space above the appliance.
- **DO NOT** place the appliance in the presence of explosive and/or flammable fumes.
- **DO NOT** cover the air inlet and outlet during operation.
- Any accessories, baking trays or oven dishes used in the appliance will become hot. Always use oven gloves when handling or removing anything from the appliance.
- **DO NOT** place food that is still packed in plastic wrap or plastic bags in the appliance.
- **DO NOT** allow food to come into contact with the heating element of the appliance.
- If the appliance begins to emit smoke, unplug it immediately. Only open the door once the smoke has cleared. Remove burnt remnants.
- **DO NOT** leave this appliance unattended whilst operating.

PLUG AND CORD

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- **WARNING: DO NOT** let the cord hang over the edge of a table or counter, serious burns may result from the air fryer being pulled off the counter where it may be grabbed by children or become entangled with the user.
- **DO NOT** let the supply cord touch hot surfaces.
- **DO NOT** carry the appliance by the power cord.
- **DO NOT** use any extension cord with this appliance.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- **DO NOT** pull the plug out by the cord as this may damage the plug and/or the cable.
- **DO NOT** plug and unplug with wet hands.

WIRING SAFETY FOR UK USE ONLY

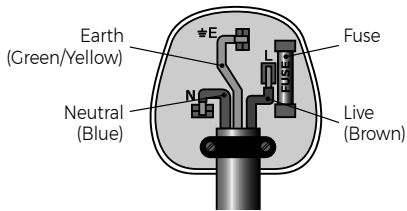

IMPORTANT: As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are labelled in accordance with the following code:

Blue neutral [N] Brown live [L] Green/ Yellow [EARTH] 

PLUG FITTING DETAILS (WHERE APPLICABLE)

- The wire labelled blue is the neutral and must be connected to the terminal marked [N].
 - The wire labelled brown is the live wire and must be connected to the terminal marked [L].
 - The wire labelled green/yellow must be connected to the terminal marked with the letter [E].
 - On no account must either the brown or the blue wire be connected to the [EARTH] terminal.
 - Always ensure that the cord grip is fastened correctly.
- The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.
 - If in doubt consult a qualified electrician who will be pleased to do this for you.

NON-REWIREABLE MAINS PLUG

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).


If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - disconnect it from the mains - then cut it off of the mains lead and immediately dispose of it in a safe manner. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

WARNING:
This appliance **MUST** be earthed!

In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the Customer Support Team. +44 (0) 333 220 6066

GETTING TO KNOW YOUR AIR FRYER

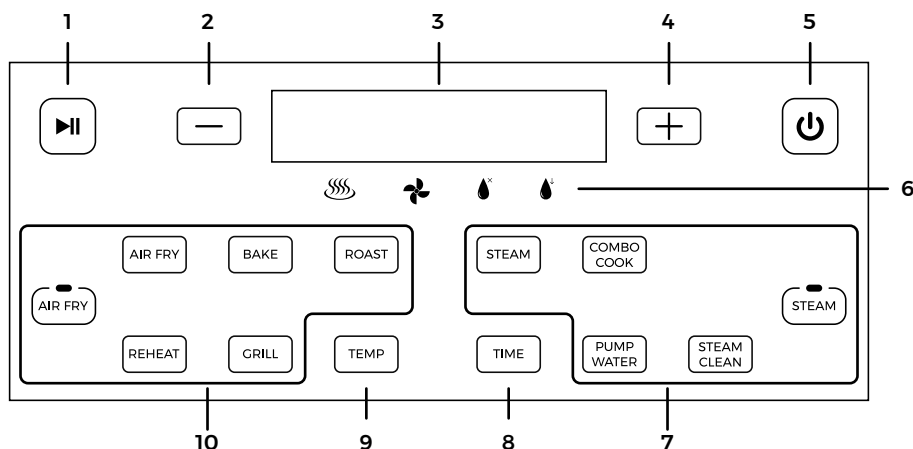

CONTROL PANEL AND DISPLAY

1. Start/Pause Key
2. Time/Temperature - Key
3. LED Display
4. Time/Temperature + Key
5. Power ON/OFF Key
6. Function Indicators
7. Steam Function Control Panel
8. Time Selection Key
9. Temperature Selection Key
10. Air Frying Function Control Panel

AIR FRYING MODE

Air Fry - A regular air fry cycle, ideal for creating low-fat fried snacks.

Bake - Automatically sets the ideal time and temperature for baking bread, cakes or snacks.

Roast - Automatically sets the ideal time and temperature for roasting meat, fish or vegetables.

Grill - Automatically sets the ideal time and temperature for grilling meat, fish or vegetables.

Reheat - Automatically sets the ideal time and temperature for reheating ingredients.

STEAM MODE

Steam - A regular steam cycle, ideal for creating a variety of simple steamed meals.

Combo Cook - This function combines the unit's air frying and steaming functions within a single cycle, making it ideal for creating full meals in one go.

Steam Clean - This function automatically cleans the unit after a cooking cycle, minimizing the need for manual maintenance.

Pump Water - This function pumps the remaining water out of the water tank after a cycle, minimizing the need for manual emptying.

STRUCTURE OF YOUR APPLIANCE



BEFORE FIRST USE



 
PREPARING FOR USE

1. Remove your appliance from the packaging.
2. Check that there is no damage to the cord or any visible damage to the body.
3. Check that all listed parts are present.
4. Remove any stickers or labels from the appliance. **DO NOT** remove the rating plate or any warnings.
5. Dispose of the packaging in a responsible manner.
6. Locate the appliance on a stable, horizontal, even and heat-resistant surface in accordance with the Important safety information section.
7. Thoroughly clean the drawer and grill plate with hot water, some washing up liquid and a non-abrasive sponge.
8. Wipe the inside and outside of the appliance with a moist cloth.
9. **DO NOT** fill the drawer with oil, frying fat or any other liquid. This is an oil-free fryer that works on hot air.
10. Place the grill plate in the drawer.
11. **DO NOT** put anything on top of the appliance, as this will disrupt the airflow and the hot air frying will be affected as a result.

AIR FRYER DRAWER SAFETY SWITCH:



For your safety, this air fryer contains a safety switch in the drawer designed to keep it from accidentally turning on when the drawer is not properly situated inside the appliance. Before using the air fryer, please ensure that the drawer is fully closed.

TURNING THE APPLIANCE ON

1. Plug the unit into a mains socket. There will be a sound prompt and the  key will illuminate and begin to flash to show the unit has been powered on.
2. Once the unit is plugged in, touch the  key on the unit's control panel to turn it on. The , +/-, mode selection, Temp and Time keys on the unit's control panel will illuminate to show it has been turned on.

NOTE: The unit will also emit a sound prompt when it is disconnected from the mains. This is a normal feature of the appliance, and not indicative of malfunction.

AUTO-OFF FUNCTION

1. When cooking is not in progress, the appliance will automatically go into Standby mode if there has been no contact with the control panel for 1 minute. The  key will remain illuminated and begin to flash, but all other indicators as well as the LED display will go out to show the unit is in Standby mode.
2. Touch the  key while the unit is in this state to bring it out of Standby mode. The indicators on the unit's control panel will light up to show the unit has been taken out of Standby mode

USING YOUR AIR FRYER

SELECTING A COOKING MODE AND PROGRAM

1. This unit is equipped with two cooking modes: air fry and steam.

NOTE: A cooking cycle cannot be started until a cooking mode is selected.

AIR FRY MODE

To select the air frying mode, touch the Air Fry key on the unit's control panel. The corresponding programmes will then light up to show this mode has been selected.

Once Air Frying mode has been selected, touch any of the program keys within its control panel to select the corresponding program. The key will begin to flash and the default time and temperature for that mode will appear on the unit's LED display to show it has been selected.

The programs available in Air Frying mode are as follows

PROGRAM	DEFAULT TIME (MIN)	DEFAULT TEMP (°C)
Air Fry	18	200
Bake	16	170
Roast	25	200
Reheat	6	120
Grill	20	200

STEAM MODE

NOTE: Ensure the water tank is filled before attempting to use Steam mode. If Steam mode is selected when the water tank has not been sufficiently filled, the unit will give off a sound prompt and the error code 'E12' will replace the default cooking time on the unit's LED display. When this occurs, fill the water tank as indicated in Filling The Water Tank section.

To select the steam mode, touch the Steam key on the unit's control panel. The corresponding programmes will then light up to show this mode has been selected.

Once Steam Cooking mode has been selected, touch any of the program keys within its control panel to select the corresponding program. The key will begin to flash and the default time and temperature for that mode will appear on the unit's LED display to show it has been selected.

The programs available in Steam mode are as follows:

PROGRAM	DEFAULT TIME (MIN)	DEFAULT TEMP (°C)
Steam	30	100
Combo Cook	30	180
Steam Clean	30	100

COMBO COOK FUNCTION

This unit is equipped with a unique Combo Cook function, accessible from the Steam mode function selection panel. In this mode, the unit will combine the air frying and steaming functions within a single cycle, easily creating succulent and nutritious meat, fish or vegetable meals.

NOTE: Before using the Combo Cook function you must fill the water tank to allow steam to be produced.

To start a combo cooking cycle, carry out the following steps:

1. Touch the 'Steam' key on the unit's control panel to select Steam mode. The Steam mode control panel will light up to show this mode has been selected.
2. Once the Steam Mode function selection panel has been activated, touch the Combo Cook key. The Combo Cook key will begin to flash and the function's default time and temperature will be displayed on the unit's control panel to show this mode has been selected.
3. If necessary, adjust the cooking time and temperature, as detailed in the corresponding section of this instruction manual.
4. Once Combo Cook mode has been selected, press the ► key to launch the cooking cycle. The unit will now automatically alternate between Air Frying and Steaming mode, as appropriate.

FILLING THE WATER TANK

1. To use any of the steam programs, begin by filling the water tank located at the top of the unit. To do this, firmly grip the tank and pull it up and away from the main body of the unit, then unscrew the water tank valve by turning it counter-clockwise until it detaches.
2. Once the water tank valve has been removed, carefully pour water through the corresponding hole until the tank is sufficiently full.
3. Once the tank is sufficiently filled with water, replace the water tank valve and turn it clockwise until it is firmly secured into place, then place the water tank back onto its corresponding slot at the top of the unit.

SETTING THE TEMPERATURE

This unit is equipped with adjustable temperature settings, from 80 to 200 degrees Celsius.

1. Touch the Temp key on the unit's control panel once to activate the Temperature Selection function. The corresponding digits will begin to flash on the LED display to show this function has been selected. Once the Temperature function has been activated, touch the + and - keys on the unit's control panel to adjust the temperature by increments of 5, from 80 to 200 degrees Celsius. Short touch each key to adjust this setting gradually or touch and hold to change the time more quickly.
2. Once the correct temperature is set, touch the ►|| key to start the cooking process. The unit will automatically begin to operate at the latest selected settings.

NOTE: The temperature can be changed during operation. To do this, touch the Temp key while a cooking cycle is in progress, then follow the steps outlined above.

SETTING THE TIMER

This unit is equipped with an adjustable 60-minute timer.

1. Touch the Time key on the unit's control panel to activate the Timer function on either or both cooking modes. The corresponding digits will begin to flash on the LED display to show this function has been selected.
2. Once the Time function has been activated, touch the + and - keys on the unit's control panel to adjust the time by increments of 1, from one (0:01) to 60 (1:00) minutes. Short touch each key to adjust this setting gradually or touch and hold to change the time more quickly.

3. Once the correct time for each cooking mode is set, touch the ►|| key to start the cooking process. The unit will automatically begin to operate at the latest selected settings.

NOTE: The time can be changed during operation. To do this, touch the Time key while a cooking cycle is in progress, then follow the steps outlined above.

START/PAUSE

1. Once the appropriate mode, program, time and temperature have been set touch the ►|| key. All mode keys except for the one selected will go out, the function key for the selected mode or program will flash, the relevant indicators will illuminate on the unit's LED display. The unit will then begin to operate on the selected settings. The LED display will show the selected temperature and the remaining cooking time for the duration of the cooking cycle.
2. Touch the ►|| key again while the unit is in operation to pause the cooking process. All the function keys on the control panel will illuminate and the unit's fan will stop working after a few seconds to show the cooking process has been interrupted.
3. Touch the ►|| key again while the unit is paused to resume the cooking process. The unit's fan will start to operate again, and the unit will continue to operate on the latest selected settings.

WEIGHTS AND MEASURES

Check these charts for basic imperial to metric conversions of weights.

METRIC	IMPERIAL	US CUPS
250ml	8 fl oz	1 cup
180ml	6 fl oz	3/4 cup
150ml	5 fl oz	2/3 cup
120ml	4 fl oz	1/2 cup
75ml	2 ½ fl oz	1/3 cup
60ml	2 fl oz	1/4 cup
30ml	1 fl oz	1/8 cup
15ml	1/2 fl oz	1 tablespoon

IMPERIAL	Metric
1/2 oz	15g
1 oz	30g
2 oz	60g
3 oz	90g
4 oz	110g
5 oz	140g
6 oz	170g
7 oz	200g
8 oz	225g
9 oz	255g
10 oz	280g
11 oz	310g
12 oz	340g
13 oz	370g
14 oz	400g
16 oz	425g
1 lb oz	450g

FOOD ALLERGIES

IMPORTANT: Some of the recipes contained in this document may contain nuts and/or other allergens. Please be careful when making any of our sample recipes that you **ARE NOT** allergic to any of the ingredients. For more information on allergies, please visit the Food Standards Agency's website at: www.food.gov.uk

SETTINGS

The table on the next page will help you select the basic settings for a variety of common ingredients.

NOTE: Keep in mind that these settings are indications. As ingredients differ in origin, size, shape and brand the best settings for the ingredients cannot be guaranteed.

NOTE: Because the Rapid Air technology instantly reheats the air inside the appliance instantly, removing the compartment briefly out of the appliance during hot air frying barely disturbs the process.

NOTE: Add 3 minutes to the preparation time before you start frying if the appliance is cold.

AIR FRY MODE SUGGESTED TIME/TEMPS

	Time (mins)	Temp (°C)	Extra information	Shake
POTATO & FRIES				
Thin Frozen Fries	18-25	200		Yes
Thick Frozen Fries	20-25	200		Yes
Potato Gratin	20-25	200		
MEAT & POULTRY				
Steak	12-18	180		No
Pork Chops	12-18	180		No
Hamburger	10-20	180		No
Sausage Roll	13-15	200		No
Drumsticks	25-30	180		No
Chicken Breast	18-25	180		No
SNACKS				
Spring Rolls	8-10	200		Yes
Frozen Chicken Nuggets	8-12	180		Yes
Frozen Fish Fingers	6-10	200		No
Frozen Bread Crumbed Cheese Snacks	8-10	180		No
Stuffed Vegetables	12-20	160		No
BAKING				
Cake	8-15	180		No
Quiche	20-22	180		No
Muffins	15-18	200		No
Sweet Snacks	20	160		No

STEAM MODE SUGGESTED TIME/TEMPS

	Time (mins)	Temp (°C)	Extra information	Shake
STEAM SETTINGS				
Fresh Shrimp	13-15	100		No
Fish	13-15	100		No
Rice	30-35	100		No
Broccoli	13-15	100		No
Corn	25-30	100		No
Ribs	30-35	100		No
Chicken Breast	30	100		No

ACCESSORIES/SPARE PARTS

Spare part replacements and accessories are available to purchase via:



+44 (0) 333 220 6066



www.towerhousewares.co.uk

PART NO	DESCRIPTION	IMAGE
T1710101	Drawer	
T1710102	Crisper Grill Plate	
T1710103	Water Tank (Valve not included)	
T1710104	Water Tank Valve	
T1710105	Water Drip Tray	
T1710106	Excess Steam Collector Pot	

CLEANING AND CARE

WARNING! Do not immerse the appliance in water or any other liquid.

NOTE: Clean the appliance after every use.

GENERAL CLEANING AND CARE

1. Switch off the appliance, remove the mains plug from the wall socket and let the appliance cool down.

NOTE: Keep the drawer open to let the unit cool down more quickly.

2. **DO NOT** use metal kitchen utensils or abrasive cleaning materials to clean the drawer, as this may damage the non-stick coating.
3. Clean the drawer with hot water, some washing-up liquid and a non-abrasive sponge or brush.

TIP: If food residue is stuck to the bottom of the drawer, leave it to soak in hot water and some washing-up liquid for a few hours or overnight.

4. Wipe the outside of the appliance with a damp cloth.
5. Wipe the inside of the appliance with hot water and a non-abrasive sponge.
6. Clean the heating element with a cleaning brush to remove any food residues.
7. Ensure all parts are thoroughly dry before use.

THE SELF CLEANING FUNCTION

- This unit is equipped with a self-cleaning function, which helps ensure the unit remains clean and in optimal functioning condition.
- To enable the self-cleaning function, touch the corresponding key on the Steam Cooking control panel. Press ►|| and the unit will automatically begin to carry out a self-cleaning cycle with the default settings (30 minutes at 100 degrees).

NOTE: When running a self-cleaning cycle, the default time and temperature are fixed and cannot be adjusted.

THE PUMP WATER FUNCTION

- This unit is equipped with a Pump Water function, which helps dispose of any excess water left in the tank after a self-cleaning cycle.
- To enable the Pump Water function, touch the corresponding key on the Steam Cooking control panel. Press ►|| and the unit will automatically begin to pump water into the drawer for a period of five minutes.
- Once the cycle has complete empty the drawer ensuring its free of water.

NOTE: When running a self-cleaning cycle, the default time and temperature are fixed and cannot be adjusted.

EMPTYING THE WATER TANK

NOTE: Ensure the water tank is emptied after every use, or whenever the unit will not be used for prolonged periods of time.

- To clean the water tank, detach it from the main body of the unit, unscrew the water tank valve by turning it counter-clockwise, and pour out the excess water onto a sink or equivalent surface.
- Alternatively, use the Pump Water function to remove excess water from the tank. Refer to the corresponding section below for guidance on how to use the Pump Water functionality.

EMPTYING THE EXCESS STEAM COLLECTOR POT

- This unit is equipped with a steam drip tank on the back of the unit, which collects excess water generated during the steam cooking process. This tank should be emptied after every use.
- To empty this tank, grip it by the protruding tabs on either side and carefully manoeuvre it loose. Be careful not to exert excessive force, as this could damage the tank.
- Once the steam drip tank has been removed from the unit, turn it upside down to dispose of any collected water, then place it back onto its slot at the back of the unit. Take care to ensure the tank is firmly secured into place before attempting to use the unit for steaming.

EMPTYING THE WATER DRIP TRAY

- This unit is equipped with a drip tray, which collects water when using the steam function. This tank should be emptied after every use.
- To empty this tank, pull it out from its slot at the bottom of the unit until it fully detaches. Be careful not to exert excessive force, as this could damage the drip tray or unit.
- Once the steam drip tank has been removed from the unit, carefully tip it forward to dispose of its contents, then place it back onto its slot at the bottom of the unit until it slides into place. Take care to ensure the drip tray is firmly secured into place before attempting to use the unit for air frying.

STORING YOUR APPLIANCE

- Ensure that the appliance is cool, clean and dry before storing.
- Store the appliance in a cool and dry place.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
The air fryer does not work.	The appliance is not plugged in.	Plug the appliance into an earthed wall socket.
	The ► key has not been touched.	Touch the ► key.
	The drawer is open and the selected function is paused.	Close the drawer to automatically resume the selected function.
The drawer will not slide inside the unit properly.	There is too much food in the drawer.	Do not over fill the drawer.
	The drawer is not correctly placed inside the unit correctly.	Ensure the drawer is correctly placed and sitting flush inside the compartment.
Fried snacks are not crispy when they come out of the fryer.	Wrong type of snacks used.	Use oven snacks or lightly brush some oil onto the snacks for a crispier result.
	Food stuck together or not in an even layer.	Shake or turn the food periodically through the cooking process.
The fried ingredients are not done.	Too much food has been added to the air fryer.	Put smaller batches of ingredients in the air fryer. Smaller batches are fried more evenly.
	The set temperature is too low.	Set to an appropriate temperature.
	The cooking time is too short.	Set an appropriate cooking time.
Fresh fries are fried unevenly in the air fryer.	Wrong type of potatoes used.	Use fresh potatoes and make sure they stay firm during frying.
	The potato sticks were not rinsed adequately before frying	Rinse the potato sticks properly to remove the starch from the outside.
Fresh fries are not crispy when they come out of the air fryer.	The crispiness of the fries depends on the amount of oil and water in them.	Make sure you dry the potato sticks properly before you add the oil.
		Cut the potato sticks smaller for a crispier result.
		Add slightly more oil for a crispier result.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
The appliance is smoking.	The ingredients have a high oil content.	Smoking will be normal. Follow the suggested settings or food manufacturer's recommendations.
	The appliance contains grease from previous use.	White smoke is caused by grease heating up inside the fryer. Clean the appliance properly after each use.
The food is burned	The food was before pre-heating was complete.	Add food to the appliance once pre-heating is completed.
	The food was cooked for too long.	Check on the progress of the food periodically through the cooking process.
	The food was left in the appliance after the cooking time had expired.	Remove the food from the appliance as soon as the cooking time has elapsed.
Water is leaking from the water tank.	The water tank valve is not sufficiently tightened.	Turn the water tank valve clockwise to tighten it and secure it into place.
	The water tank is damaged.	Contact the Customer Service department.
Ingredients are not cooked enough when using the Steam function.	There is too much food in the drawer or the food pieces are too big.	Put less food into the drawer or cut the ingredients into smaller pieces.
	The food did not cook for long enough.	Set a longer cooking cycle, as detailed in the corresponding section of this instruction manual.
	The steam generator is dirty.	Use the Steam Clean function to clean the steam generator, as detailed in the corresponding section of this instruction manual. If required, add in a cleaning solution made up of 10g citric acid for every 1 litre of water.

	Not enough water in the water tank.	Ensure a sufficient amount of water has been added to the water tank before attempting to steam cook with the unit.
	Too much water has been pumped into the cooking drawer, resulting in steam leakages.	Refrain from pumping water into the cooking drawer while cooking, or from creating excessive steam inside it.
The error code 'E12' is being displayed when attempting to cook in Steam mode.	The water tank is empty or does not have enough water.	Fill the water tank as instructed in the corresponding section of this instruction manual.
An unpleasant smell is emanating from the appliance after not being used for an extended period of time.	The unit has not been cleaned out correctly after the previous use.	Clean the unit thoroughly after each use, as detailed in the Cleaning and Care section of this instruction manual.
	The steam drip tank has not been emptied out.	Empty out the steam drip tank, as detailed in the Cleaning and Care section of this instruction manual.
	The water tank has not been drained after the previous use.	Drain the water tank and dispose of any excess water using the Pump Water function. Refer to the corresponding section of this instruction manual for guidance on how to use this function.

DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill.

Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



CUSTOMER SUPPORT

If you have any questions or concerns about your new product, please contact our helpful Customer Support Team:



+44 (0) 333 220 6066



www.towerhousewares.co.uk

Please have your Model No. available. This can be found on the front cover of this instruction manual and on the appliance's rating label.



HOMEMADE FRIES



15 MINS



20 MINS

INGREDIENTS

2 large potatoes
such as Maris Piper

1 tbsp sunflower oil

Salt and black pepper

METHOD

1. Peel the potatoes and cut into 1 cm thick chips.
2. Place the chips into a pan and cover with cold water, bring to the boil then simmer for 10 minutes. Drain in a colander then rinse under the tap to cool completely and pat dry on kitchen paper.
3. Place the potatoes in a bowl and drizzle over the oil, then season with salt and black pepper.
4. Remove the fries from the bowl leaving behind any excess oil.
5. Place the fries into the air fryer and then cook according to the times and temperatures shown in the Settings table above.





STEAMED VEGETABLES WITH GARLIC BUTTER



10 MINS



10 MINS

INGREDIENTS

1 head broccoli
(florets only)

1 cup carrots

1 cup sugar snap peas

1 tbsp minced garlic

4 tbsp Butter

Salt and black pepper
to taste

METHOD

1. Remove the stems from the broccoli, Wash the vegetables as needed and chop them to the desired size. Add florets, 1 cup of carrots and 1 cup of sugar snap peas into the air fryer steamer.
2. Steam the vegetables for about 8 minutes or until done to your liking. Once done set aside the vegetables whilst you make the garlic butter.
3. Heat your saucepan over a mid-low heat, melt 4 tbsp of butter and saute 1 tbsp of minced garlic until fragrant. After a minute season with salt and pepper to taste, then stir to combine.
4. Now simply add the garlic butter to your vegetables and enjoy!





HONEY LIME CHICKEN WINGS



5 MINS



30 MINS

INGREDIENTS

- 12 chicken wings
- 2 tbsp soy sauce
- 2 tbsp honey
- 1 ½ tsp salt
- ¼ tsp white pepper
- ¼ tsp black pepper
- 2 tbsp fresh lime juice

METHOD

1. Place all the ingredients inside a large mixing bowl or zip-locked sealing bag.
2. Mix them well and marinate in the refrigerator for at least 4 hours (preferably overnight).
3. Line a baking tray with baking paper and evenly scatter the chicken wings across it.
4. Cook according to the times and temperatures shown in the Settings table above, turning halfway through.





LEMON GARLIC SALMON



15 MINS



30 MINS

INGREDIENTS

- 4 skin-on salmon fillets
- 4 tbsp butter
- 1 clove garlic, minced
- 1 tsp salt
- 1 tsp fresh dill, chopped
- 1 tbsp fresh parsley, chopped
- Juice of 1 lemon

METHOD

1. Melt the butter and mix in the remaining ingredients to create a butter sauce.
2. Evenly coat the fish in the sauce, making sure the whole fish is covered, then place it on a baking tray lined with baking paper.
3. Place the baking tray inside the air fryer and cooked on the Combo-Cook setting.





MOLTEN CHOCOLATE LAVA CAKE



10 MINS



25 MINS

INGREDIENTS

100g dark chocolate chips

100g unsalted butter

1 ½ tbsp self-raising flour

2 eggs

2 ½ tbsp sugar

METHOD

1. Melt the chocolate and butter, continuously stirring to avoid burning the chocolate.
2. Stir the flour into the mixture, mix it in lightly and set the mixture aside.
3. In a separate mixing bowl, mix together the eggs and sugar until light and frothy.
4. Add the chocolate mixture to the eggs and sugar, slowly blending them together.
5. Pour the mixture into an oven-safe cup or ramekin and place it inside the air fryer.
6. Use the Bake setting on the air fryer or turn the air fryer on at 190°C for 6 minutes.
7. Once baked serve immediately with ice-cream.



TOWER®

over 100 YEARS of quality

thank you!



We hope you enjoy your appliance for many years...

This product is guaranteed for 12 months from the date of original purchase.

If any defect arises due to faulty materials of workmanship, the faulty products must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

THE FOLLOWING CONDITIONS APPLY:

The product must be returned to the retailer with proof of purchase or a receipt.

The product must be installed and used in accordance with the instructions contained in this instruction guide.

It must be used only for domestic purposes.

It does not cover wear and tear, damage, misuse or consumable parts.

Tower has limited liability for incidental or consequential loss or damage.

This guarantee is valid in the UK and Eire only.

The standard one year guarantee is only extended to the maximum available for each particular product upon registration of the product within 28

days of purchase. If you do not register the product with us within the 28 day period, your product is guaranteed for 1 year only.

To validate your extended warranty, please visit www.towerhousewares.co.uk and register with us online.

Please note that length of extended warranty offered is dependent on product type and that each qualifying product needs to be registered individually in order to extend its warranty past the standard 1 year.

Extended warranty is only valid with proof of purchase or receipt.

Your warranty becomes void should you decide to use non Tower spare parts.

Spare parts can be purchased from www.towerhousewares.co.uk

Or call our Customer Support Team on: **+44 (0) 333 220 6066**

