



We hope that you will enjoy using your Tower air fryer oven accessories

Register your product online at www.towerhousewares.co.uk for guarantee details and exclusive offers

Your standard I year guarantee is not affected if you choose not to register online. The 1 year guarantee is for the accessory pack items only and does not apply to any Tower Air Fryer

Should you have a problem with your product, or need any spare parts, please contact our Service Department on: +44 (0)333 220 6066

 
Your warranty becomes void should you decide to use non Tower spare parts. Spare parts can be purchased from www.towerhousewares.co.uk



17 PIECE AIR FRYER OVEN **ACCESSORY SET**

CARE AND USE INSTRUCTIONS Please read carefully







GREAT BRITISH DESIGN, INNOVATION AND EXCELLENCE **SINCE 1912**

Since the turn of the 20th century, Tower has been designing, developing and manufacturing housewares and small appliances used by millions of households throughout the UK and beyond. During the 1960s, the rise in popularity of pressure cooking saw Tower become the UK's largest producer of pressure cookers, right through into the late 1980s. In recent years the Tower brand has been reborn with an exciting and varied range of housewares and electrical appliances that have quickly reinstated the brand's richly deserved status as a household name.



CARE AND USE INSTRUCTIONS

17 PIECE AIR FRYER OVEN ACCESSORY SET

PLEASE READ AND KEEP

Thank you for choosing this Tower accessory set. Please read these instructions carefully, they will tell how to use and care for your Tower accessories.

If you have any further questions about the set please contact the customer services department, the contact details can be found on the back of this leaflet.

TOWER

HELPLINE: +44 (0)333 220 6066



BEFORE FIRST USE

Before using your new accessories it is recommended that all labels are removed and the bakeware, cupcake cases, waffle and tartlet moulds, silicone mat, silicone tongs and brush are washed with a non-abrasive, mild detergent solution, rinsed and dried thoroughly.

To obtain the best results from any items with non-stick cooking surfaces it is recommended that you condition the non-stick cooking surface with a small amount of cooking / vegetable oil which is spread on the surface with a clean cloth and then use a paper towel to remove the excess oil. Periodic conditioning will help to preserve the release quality of the non-stick surface.

MAINTENANCE AND CLEANING

The cupcake cases, waffle and tartlet moulds, silicone mat, silicone tongs and brush are dishwasher safe, however hand wash is recommended to maintain the finish. Do not use steel wool, scouring pads, oven cleaners, bleach or strong abrasive cleaners to clean them. Store in a cool, dry and clean place.

The bakeware is oven safe to 230°C/Gas Mark 7. Always use protective oven gloves when handling hot bakeware items during or after cooking. Do not use in microwave ovens, grill or use on direct heat sources. These bakeware items are for household use only.

HELPLINE: +44 (0)333 220 6066

TO PIECE AIR FRYER OVEN ACCESSORY SET

It is recommended that plastic or wooden utensils are used to minimize the damage to the surfaces. Avoid sharp metal implements such as forks, mashers, knives or whisks as they can damage the non-stick surfaces.

DO NOT plunge into, or fill with, cold water when hot. Cool the bakeware for a few minutes before cleaning.

The bakeware items are dishwasher safe, however hand wash is recommended to maintain the finish. Do not use harsh abrasive detergent or scouring pads/brushes to clean them.

To remove dried on food, soak in warm soapy water before cleaning. Do not leave your bakeware to soak in water for long periods of time.

Over time, the rim of the bakeware may appear slightly rusty due to washing up water becoming trapped inside this area. This is natural trait of carbon steel, not a fault, and it will not affect the performance of the product. If desired, leave the products in a warm oven for a few minutes to remove moisture from inside the rim.



STORAGE

Dry the bakeware items thoroughly before storing.

DO NOT store wet bakeware as it will cause a bacteria buildup. Store your bakeware in a clean, cool and dry place. When stacking, place a layer of paper/protector between the bakeware to avoid scratching or damage.

FAULTY PRODUCT?

Tower products are tested before leaving the factory. In the unlikely event of any product proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 12 months of original purchase, you should contact the Helpline number quoting the model number.

You may be asked to return a copy of proof of purchase. Subject to the exclusions set out on page 10 (see Exclusions), the faulty product will then be repaired or replaced and

dispatched usually within 7 working days of receipt.



If, for any reason, this item is replaced during the 1 year guarantee period, the guarantee on the new item will be calculated from original purchase date.

Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase. To qualify for the 1 year guarantee, the product must have been used according to the instructions supplied.

EXCLUSIONS

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage.

This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Tower shall not be liable to replace or repair the goods under the terms of the guarantee where the fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the damage is caused in transit.

This product is intended for domestic use ONLY.

HELPLINE: +44 (0)333 220 6066



 




We hope that you will enjoy using your Tower air fryer oven accessories

Register your product online at www.towerhousewares.co.uk for guarantee details and exclusive offers

Your standard I year guarantee is not affected if you choose not to register online. The 1 year guarantee is for the accessory pack items only and does not apply to any Tower Air Fryer



This product is guaranteed for 12 months from the date of original purchase.

TO PIECE AIR FRYER OVEN ACCESSORY SET

If any defect arises due to faulty materials of workmanship, the faulty products must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

Proof of purchase and the registration certificate must be kept for the entirety of the guarantee.

The Following Conditions Apply: The product must be returned to the retailer

with proof of purchase. The product must be used in accordance with the instructions contained in this instruction guide.

It must be used for domestic purposes only. It does not cover wear and tear, damage, misuse or consumable parts.

Tower has limited liability for incidental or consequential loss or damage.

This guarantee is valid in the UK and Eire Only.

HELPLINE: +44 (0)333 220 6066

17 PIECE AIR FRYER OVEN ACCESSORY SET

YOUR RECEIPT:

Affix your store receipt to this page for safe keeping.

PLEASE AFFIX YOUR RECEIPT HERE

MODEL NUMBER:

Please make a note of the product model number. You will find this on the packaging it came in. Please quote the model number when you contact us.

WRITE YOUR MODEL NUMBER HERE



DISPOSAL OF THE PRODUCT

Please visit

www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of non electrical items.

Please arrange to take this product to your local Civic Amenity site for recycling, once it has reached the end of its life.



HELPLINE: +44 (0)333 220 6066

HELPLINE: +44 (0)333 220 6066

HELPLINE: +44 (0)333 220 6066