

TOWER®

over 100 YEARS of quality

T20014

2 Slice Stainless Steel Toaster

INFINITY
COLLECTION



3 YEAR
GUARANTEE



GREAT BRITISH
DESIGN SINCE 1912

SAFETY AND INSTRUCTION MANUAL
PLEASE READ CAREFULLY

*Subject to registering your Extended Guarantee online at www.towerhousewares.co.uk.



Towerbrand

GREAT BRITISH DESIGN, INNOVATION
AND EXCELLENCE SINCE 1912

Since the turn of the 20th century, Tower has been designing, developing and manufacturing housewares and small appliances used by millions of households throughout the UK and beyond. During the 1960s, the rise in popularity of pressure cooking saw Tower become the UK's largest producer of pressure cookers, right through into the late 1980s. In recent years the Tower brand has been reborn with an exciting and varied range of housewares and electrical appliances that have quickly reinstated the brand's richly deserved status as a household name.

TOWER

Matching INFINITY kettles also available.



T10015



T10016

Visit
www.towerhousewares.co.uk
for further details.

Thank you for purchasing this appliance from the Tower range.

Please read this manual carefully **BEFORE** using the appliance for your own safety.

It has been designed to provide many years of trouble-free use.

There are many benefits to using a Tower 2 Slice Stainless Steel Toaster:

- Dual variable browning control to get your toast right every time.
- Removable crumb trays for easy maintenance.
- Self-centring function to evenly toast bread every time.
- Reheat and Defrost functions for quick snacks.
- Compact body for easy storage and use.
- Built-in cord storage.

Contents:

1. **Specifications**
Components and structure
2. **Technical Data**
3. **Important Safety Information**
4. **Before First Use**
5. **Using your Appliance**
6. **Troubleshooting**
7. **Recycling**
8. **Cleaning & Care**
9. **Wiring Safety**
10. **Warranty Information**
11. **Your Receipt**

See back page for Customer Service Information.

Call us first, we can help.

With advice, spares and returns.

Visit our website: **Call: +44 (0)333 220 6066**
towerhousewares.co.uk (8.30am to 6.00pm Monday-Friday)

1 - Specifications:

This box contains:

Instruction Manual
Tower 2 Slice Toaster



Structure of your appliance:

- | | |
|-------------------|---------------------|
| 1. Toasting Lever | 5. Browning Control |
| 2. Defrost | Dial |
| 3. Reheat | 6. Crumb Tray |
| 4. Cancel | |

2 - Technical Data:

Description:	2 Slice Stainless Steel Toaster
Model:	T20014
Rated Voltage:	220-240V 50/60Hz
Power Consumption:	750 - 900W

Documentation

We declare that this product conforms to the following product legislation in accordance with the following directive(s):

2014/30/EU	Electromagnetic Compatibility Directive.
2014/35/EU	Low Voltage Directive.
2011/65/EU	Restriction of Hazardous Substances Directive.
1935/2004/EC	Materials & Articles in Contact With Food (LFGB section 30 & 31).
2009/125/EC	Eco-Design of Energy Related Products.

RK Wholesale LTD Quality Assurance, United Kingdom.

Should you encounter problems or require a replacement part, contact the Tower Customer Support Team: **+44 (0) 333 220 6066**.

Some spare parts may be ordered from the Tower website.
Your warranty becomes void should you decide to use non Tower spare parts.
Spare parts can be purchased from **www.towerhousewares.co.uk**

Guarantee for spare parts:

The spares and accessories are guaranteed for 1 year from date of purchase.
The main body and housing are guaranteed for the extended free warranty subject to registration.
If any defect arises due to faulty materials or workmanship, the faulty products must be returned to the place of purchase within 12 months from the date of purchase.
Refund or replacement is at the discretion of the retailer.

3 - Important Safety Information:

Please read these notes carefully BEFORE using your Tower appliance

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- Please ensure that the appliance is used on a stable, level, and heat resistant surface.
- DO NOT immerse cords, plugs or any part of the appliance in water or any other liquid.
- DO NOT leave the appliance unattended while it is operating.
- Close supervision is necessary when any appliance is used by or near children or pets.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Switch off at the wall socket then remove the plug from the socket when not in use or before cleaning.
- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer or its service agent or a similarly qualified person.
- DO NOT let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- The use of accessory attachments is not recommended by the appliance manufacturer apart from those supplied with this product. DO NOT use extension cords with the appliance.

- DO NOT pull the plug out by the cord as this may damage the plug and/or the cable.
- DO NOT use this product for anything other than its intended use.
- This appliance is for household use only.
- DO NOT carry the appliance by the power cord.
- DO NOT use the appliance outdoors.
- Prior to first use, the toaster should be used for a few minutes without bread in it. There will be some smoke at first, this is entirely normal.
- DO NOT touch the hot surface. Use handles or knobs.
- Use only pre-sliced bread.
- IMPORTANT: DO NOT insert oversized foods, metal foil packages, or metal utensils into the toaster. This may result in electric shock.
- DO NOT use the toaster near curtains, upholstery or other decorative fabrics, as they can easily catch fire and cause a safety hazard.
- DO NOT remove food from the toaster while the push lever is down.
- DO NOT remove the crumb tray while the toaster is plugged in. Disconnect from power supply, wait for it to cool, then remove the crumb tray.
- The temperature of accessible surfaces may be high when the appliance is operating.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the Customer Support Team: +44 (0) 333 220 6066

4 - Before First Use

Before first use:

Read all instructions and safety information carefully before first use. Please retain this information for future reference.

1. Remove all packaging materials including those that may be inside the toasting slots or toasting lever slots.
2. Wipe the exterior with a damp cloth. Dry thoroughly. Do not use abrasive cleaners.
3. Do not put the toaster, cord or plug in water.
4. Make sure the crumb tray is pushed all the way into the back of the toaster and that the toasting levers are in the UP position.
5. Unwrap the power cord from the cord storage area on underneath the toaster, and plug it into a 220-240V AC outlet.
6. Turn the browning control dial to the lightest setting.
7. Lower the toasting lever until it locks into place. Operate the toaster without bread once or twice to burn off any manufacturing residue. The odour is normal and will go away after several uses.

Note: You may notice a light amount of smoke; this is also normal and will stop as the heating elements continue to heat.

5 - Using Your Appliance

Self-Centring Guides:

Lowering the toasting lever closes the centring guides and holds the bread or toaster food centrally in the toasting slots.

Buttons:

Cancel: This button allows you to stop the toasting process.

Defrost: This button allows you to defrost frozen bread.

Reheat: This button allows you to reheat your bread without any extra browning or toasting.

Note: The toasting lever will not lock down unless the toaster is plugged into an electrical outlet.

Toasting Instructions:

1. Make sure the crumb tray is pushed all the way into the back of the Toaster and that the toasting lever is in the UP position.
2. Make sure no bread or any other objects are inside the toasting slots.
3. Place the Toaster on a flat, level, heat resistant surface.
4. Plug the power cord in to a mains outlet.
5. Position the browning control dial to your desired setting. There are 7 browning levels. Level 1 is for white and level 7 is for the darkest browning setting.
6. Remove all protective wrappings from food before placing into the toasting slots.
7. Insert bread or toaster food into the toasting slots. One or two slices can be toasted at a time.
8. Lower the toasting lever until it locks into place. The Cancel button will light up, and the self-centring guides will hold the food upright for uniform side-to-side toasting. Once the bread is lowered into position, toasting will begin.

Tips: To test toasting times for browning, use both toasting slots and position the browning control dial between levels 3 and 4. Then adjust each subsequent toasting to your preference.

Toasting one slice will come out darker then toasting two slices at once. If toasting continuously, the bread will become darker on the next cycle.

9. When the toast reaches the selected browning level, it will pop up automatically.
10. Remove bread from toasting slots. Caution: Use care when removing bread as the bread and the top of the toaster will still be hot.
11. If your toast jams, unplug the cord and move the toasting lever up and down a few times to raise the jammed bread.
12. To interrupt toasting, press the CANCEL button. DO NOT lift the toasting lever.
13. Unplug cord from wall outlet when not in use.

Caution: If toaster starts to smoke, press Cancel button to stop toasting immediately.

Avoid toasting the food with extremely runny ingredients such as butter.

Defrosting Instructions:

1. To defrost frozen bread, insert the bread into the toasting slots.
2. Set the browning control dial to your desired setting.
3. Press down the toasting lever until it locks into place.
4. Press the Defrost button, and it will light up.
5. The defrost process will begin. Your bread will pop up when it's finished.

Reheating Instructions:

1. To reheat toasted bread, insert the bread into the toasting slots.
2. Press down the toasting lever until it locks into place.
3. Press the Reheat button and it will light up.
4. The reheating process will begin. Your bread will pop up when it's finished.

Note: The toasting lever will not lock into position unless the toaster is plugged into a 220- 240V AC electrical outlet.

When toasting a single slice, the bread may be placed in any toasting slot. The bread slot is for toasting regular bread slices.

To prevent a fire hazard, never place bread over the opening of the Toaster, always place bread into the slots.

DO NOT change the browning control dial during the toasting cycle. First press the CANCEL button; then turn the browning control dial to adjust the browning level. Lower the toasting lever and toast.

IMPORTANT: Never use a fork or sharp-edged utensil to remove toast, because that may damage the heating element or cause injury.

6 - Troubleshooting

Questions	Answers
Why is there a burning smell omitting from my toaster?	Unplug the toaster and allow it to cool. Crumbs in the crumb tray may be causing the burning smell. Remove the crumb tray and empty it over a bin. There may be food debris caught in the heating element. Check inside and gently pry the crumbs out.
Why won't my toast pop up after toasting is complete?	Your bread may be too floppy/soft. Try using bread that is slightly thicker or less pliable.
Browning control dial will not operate.	There may be crumbs stuck in the socket. Unplug the toaster and try shaking it to dislodge any debris. If the browning dial still does not work call the customer service line.

7 - Recycling

DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill.

Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



8 - Cleaning & Care

- Do not immerse any part of the toaster in water or any other liquid.
- Clean the toaster regularly. This appliance contains no user serviceable parts and requires little maintenance. Leave any servicing or repair to qualified personnel. Be sure to empty and clean the crumb tray regularly.
- Unplug the toaster and allow it to cool completely before cleaning.
- To clean, wipe the exterior with a slightly dampened soft cloth or sponge and dry with a cloth or paper towel. Do not use strong cleaners or abrasives that may scratch surface, and never spray cleaners directly onto the toaster.

Note: Never use metal polish to clean the toaster.

IMPORTANT:

Do not use the appliance if damp. Ensure the appliance is completely clean and dry before storing.

To store your appliance:

- Unplug power cord from the power outlet and clean as instructed.
- When not in use the power cord may be wound under the bottom of the toaster.
- Store on a flat, dry level surface out of reach of children.


WARNING:

Never use a fork or sharp-edged utensil to remove toast, as this may damage the heating element or cause serious injury through electric shock.

9 - Wiring Safety for UK Use Only

IMPORTANT

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

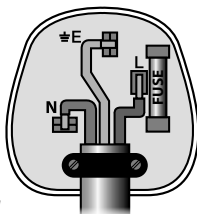



The wires in the mains lead are coloured in accordance with the following code:

Blue neutral [N] Brown live [L] Green/Yellow [EARTH] 

Plug Fitting Details (Where Applicable). The wire coloured blue is the neutral and must be connected to the terminal marked [N] or coloured black.

The wire coloured brown is the live wire and must be connected to the terminal marked [L] or coloured red.

The wire coloured green/yellow must be connected to the terminal marked with the letter [E] or marked .

On no account must either the brown or the blue wire be connected to the [EARTH] terminal .

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - disconnect it from the mains - then cut it off of the mains lead and immediately dispose of it in a safe manner. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

WARNING:
This appliance **MUST** be earthed!

10 - Warranty

**3* | YEAR
GUARANTEE**

**GREAT BRITISH
DESIGN SINCE 1912**

As a thank you for purchasing one of our fantastic products, we are offering you an extra 2 years peace of mind in addition to your 1 year guarantee.

To receive your extra 2 year guarantee, register your appliance online within 28 days of purchase by visiting www.towerhousewares.co.uk



This product is guaranteed for 12 months from the date of original purchase. If any defect arises due to faulty materials of workmanship, the faulty products must be returned to the place of purchase. Refund or replacement is at the discretion of the retailer.

The Following Conditions Apply:

- The product must be returned to the retailer with proof of purchase or a receipt.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- Tower has limited liability for incidental or consequential loss or damage.

This guarantee is valid in the UK and Eire only.

The standard one year guarantee is only extended to the maximum available for each particular product upon registration of the product within 28 days of purchase. If you do not register the product with us within the 28 day period, your product is guaranteed for 1 year only.

To validate your extended warranty, please visit www.towerhousewares.co.uk and register with us online.

Please note that length of extended warranty offered is dependent on product type and that each qualifying product needs to be registered individually in order to extend its warranty past the standard 1 year. Extended warranty is only valid with proof of purchase or receipt.

11 - Your Receipt

Affix your store receipt to this page for safe keeping.

TOWER®

over 100 YEARS of quality

INFINITY
COLLECTION

thank you!

We hope you enjoy your appliance for many years. As a thank you for purchasing one of our fantastic products, we are offering you an extra 2 years peace of mind.

*To receive your extra 2 years guarantee, register your appliance online within 28 days of purchase by visiting:

www.towerhousewares.co.uk

Should you have a problem with your appliance, or need any spare parts, please call our Customer Support Team on:

+44 (0) 333 220 6066

Your warranty becomes void should you decide to use non Tower spare parts.
Spare parts can be purchased from
www.towerhousewares.co.uk

3 | YEAR
GUARANTEE



GREAT BRITISH
DESIGN SINCE 1912

0418.V2