

TOWER®

over 100 YEARS of quality

T19041

Waffle Maker



Call us first, we can help.

With advice, spares and returns.

Visit our website: towerhousewares.co.uk **Call: +44 (0)333 220 6066**
(8.30am to 6.00pm Monday-Friday)



SAFETY AND INSTRUCTION MANUAL
PLEASE READ CAREFULLY

*Subject to registering your Extended Guarantee online at www.towerhousewares.co.uk.

This box contains:
Instruction Manual
Waffle Maker


1. Handle Lock
2. Non-stick Cooking Plates
3. Power Light
4. Ready Light



Technical Data:

Description:	Waffle Maker
Model:	T19041
Rated Voltage:	220-240V
Power:	750W
Frequency:	50/60Hz


Wiring Safety for UK Use Only

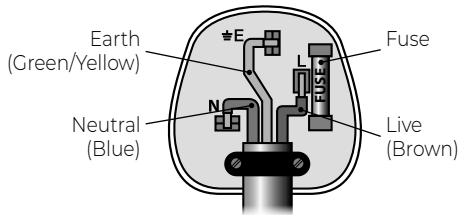

IMPORTANT

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are labelled in accordance with the following code:

Blue neutral [N] Brown live [L] Green/Yellow [EARTH] 

Plug Fitting Details (Where Applicable).

The wire labelled blue is the neutral and must be connected to the terminal marked [N].

The wire labelled brown is the live wire and must be connected to the terminal marked [L].

The wire labelled green/yellow must be connected to the terminal marked with the letter [E].

On no account must either the brown or the blue wire be connected to the [EARTH] terminal. Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same

rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-Rewireable Mains Plug.

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - disconnect it from the mains - then cut it off of the mains lead and immediately dispose of it in a safe manner. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

WARNING:

This appliance **MUST** be earthed!

DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill.

Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



Important Safety Information:

Please read these notes carefully BEFORE using your Tower appliance

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer, its service agent or a similarly qualified person.
- DO NOT let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- DO NOT carry the appliance by the power cord.
- DO NOT use any extension cord with this appliance.
- DO NOT pull the plug out by the cord as this may damage the plug and/or the cable.
- Switch off at the wall socket then remove the plug from the socket when not in use or before cleaning.
- Switch off and unplug before fitting or removing tools/ attachments, after use and before cleaning.
- Close supervision is necessary when any appliance is used by or near children.
- Children should not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance should not be undertaken by children without supervision.
- Take care when any appliance is used near pets.

- DO NOT use this product for anything other than its intended use.
- This appliance is for household use only.
- Please read these notes carefully BEFORE using your Tower appliance
- Please ensure that the appliance is used on a stable, level, and heat resistant surface.
- DO NOT immerse cords, plugs or any part of the appliance in water or any other liquid.
- DO NOT use the appliance outdoors.
- High temperatures are present during operation. Only touch the handles on the unit.
- The appliance is not intended to be operated by means of an external timer or separate remote control system.
- Bread, oil, and other foods may burn. Don't use the Waffle Maker near or below curtains or other combustible materials, and watch it while in use.
- DO NOT wrap food in plastic film, polythene bags, or metal foil, as this will damage the Waffle Maker and may cause a fire hazard.
- Keep the Waffle Maker and the cable away from hotplates, hobs or burners.
- Unplug the Waffle Maker when not in use, before moving and before cleaning.
- DO NOT use the Waffle Maker for any purpose other than those intended.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the Customer Support Team.

Before First Use:

Read all instructions and safety information carefully before first use. Please retain this information for future reference.

1. Carefully unpack the appliance. Remove all packaging materials.
2. Place the appliance on a flat, level surface. Open the lid of the appliance.
3. Wipe the cooking plates with a damp cloth so that they are clean.

NOTE: Use a small amount of cooking oil to season the cooking plates, and wipe off any excess with a dry cloth. This only needs to be done once.

4. Wipe the outside of the housing with a soft damp cloth. NEVER immerse the power cord and plug in water or any other liquid.
5. Close the appliance.
6. Plug into the wall outlet and pre-heat for 10 minutes.

NOTE: During this initial phase a slight harmless odour and some smoke may be emitted from the waffle maker. This is normal.

Using Your Appliance:

Preparing Your Appliance:

1. Connect the unit to the electrical supply. The red and green indicator lights will switch on to show that the appliance is pre-heating.
2. Close the lid while the pre-heating occurs. During this time prepare your waffle ingredients.
3. The appliance is ready for use once the red indicator goes off. This will take approximately 2-4 minutes.

Preparing waffles:

1. Prepare your waffle batter as detailed in the Recipe section.
2. Lift the safety catch and open the waffle maker.
3. Carefully pour the waffle batter onto each of the two cooking plates, taking care to prevent spillages.

Note: Waffle batter tends to expand during the cooking process, and may spill from the cooking plates if they have been overfilled. To prevent this from happening, we recommend filling the cooking plates to no more than $\frac{3}{4}$ full, so that the batter has room to expand as it cooks.

4. Close the casing to ensure the waffles are cooked evenly.
5. Lock the safety catch.
6. Normal cooking times will be 3-6 minutes for each waffle. During this period, the red indicator light will periodically turn itself on and off, as the thermostat keeps the waffle maker at the proper baking temperature.

Serving your waffles:

1. Remove the waffles from the heating plates with a plastic or wooden spatula.
2. Be careful when removing the waffles from the unit, as they will be quite hot.
3. Allow the waffles to cool for a few minutes before eating.

Tips:

- Always preheat your waffle maker fully.
- Ensure the lid of the waffle maker is down whilst preheating.
- Butter, margarine and olive oil can all be used to coat the cooking plates for optimal results.
- Light/low fat margarines are not recommended as they do not withstand heat.
- Allow hot waffles to rest for 2-3 minutes after removing them from the waffle maker.

Troubleshooting:

Questions	Answers
Do the indicator lights show when my waffle is done?	No. The indicator lights only indicate power, and that the waffle maker has reached the correct temperature. Ensure you do not leave the waffle maker during use.
How long will it take to make a waffle?	We recommend toasting your waffles for around five minutes. Generally the waffles will be ready approximately 3 – 6 minutes after adding them to the waffle maker, depending on your preference.

Cleaning & Care:

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Refer it to qualified personnel if servicing is needed. Always unplug this waffle maker from the power source and wait until it cools down before cleaning.

There is no need to take your waffle maker apart for cleaning.

To clean the waffle maker, dry it with a paper towel to absorb excess oil. Brush any crumbs from the grooves and wipe them with damp cloth and mild soap.

Never immerse the unit in water. Avoid using scratching or sharp utensils, as they will scratch the non-stick surface.

Do not use cleansers or oven cleaners on the heating plates.

Use a damp cloth with mild soap to clean the handles and outer surfaces.

Should any leftover batter be difficult to remove, pour a little cooking oil onto the plate and wipe it off after approximately 5 minutes or once the dough has softened.

IMPORTANT:

After cleaning allow to dry fully before using again.

DO NOT use the appliance if damp. Ensure the appliance is completely clean and dry before storing.

DO NOT place the appliance in the dishwasher.

To store your appliance:

1. Unplug the power cord from the power outlet and clean as above.
2. Allow the appliance to dry fully.
3. Store on a flat, dry level surface out of reach of children.

Waffle Batter

Use this base to create delicious home-made waffles!

Ingredients

150g self raising flour
1 teaspoon baking powder
1 teaspoon sugar
1 large free-range egg
240ml semi-skimmed milk
1 orange - optional
Vanilla extract - optional

Method

1. Mix all the dry ingredients together in a large bowl.
2. Gradually beat in the egg, then add milk slowly, whisking well to get as smooth a batter as possible.
3. If making sweet waffles, grate in the orange zest and add a few drops of vanilla extract.
4. Ladle the mixture into a heated waffle maker and close the lid to create delicious waffles!

NOTES:

NOTES:

NOTES:

TOWER[®]

over **100 YEARS** of quality

thank you!

We hope you enjoy your appliance for many years.

This product is guaranteed for 12 months from the date of original purchase. If any defect arises due to faulty materials or workmanship, the faulty products must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

The Following Conditions Apply:

The product must be returned to the retailer with proof of purchase or a receipt. The product must be installed and used in accordance with the instructions contained in this instruction guide.

It must be used only for domestic purposes.

It does not cover wear and tear, damage, misuse or consumable parts.

Tower has limited liability for incidental or consequential loss or damage.

This guarantee is valid in the UK and Eire only.

The standard one year guarantee is only extended to the maximum available for each particular product upon registration of the product within 28 days of purchase. If you do not register the product with us within the 28 day period, your product is guaranteed for 1 year only.

To validate your extended warranty, please visit www.towerhousewares.co.uk and register with us online.

Please note that length of extended warranty offered is dependent on product type and that each qualifying product needs to be registered individually in order to extend its warranty past the standard 1 year.

Extended warranty is only valid with proof of purchase or receipt.

Your warranty becomes void should you decide to use non Tower spare parts.

Spare parts can be purchased from www.towerhousewares.co.uk

Should you have a problem with your appliance, or need any spare parts, please call our Customer Support Team on:

+44 (0) 333 220 6066

