

TOWER®

over 100 YEARS of quality

T19029

60W TWO STAGE ELECTRIC KNIFE & TOOL SHARPENER



Call us first, we can help.

With advice, spares and returns.

Visit our website:
towerhousewares.co.uk

Call: +44 (0)333 220 6066
(8.30am to 6.00pm Monday-Friday)



SAFETY AND INSTRUCTION MANUAL
PLEASE READ CAREFULLY

*Subject to registering your Extended Guarantee online at www.towerhousewares.co.uk.

Specifications:

This box contains:

Instruction Manual
Sharpener

1. Coarse Sharpener V Groove
2. Coarse Sharpener V Groove
3. On/Off Button
4. Fine Sharpener V Groove
5. Fine Sharpener V Groove
6. Screwdriver Sharpening Slot
7. Scissors Sharpening Groove
8. Auto Retractable Cord Button
9. Anti-Slip Feet

 


Technical Data:

Description:	60W Two Stage Electric Knife & Tool Sharpener
Model:	T19029
Rated Voltage:	220-240V~
Frequency:	50/60Hz
Power Consumption:	60W

Wiring safety for UK use only

IMPORTANT

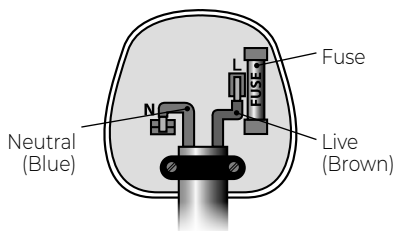

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue neutral [N] Brown live [L]

Plug Fitting Details (Where Applicable).

The wire coloured blue is the neutral and must be connected to the terminal marked [N] or coloured black.

The wire coloured brown is the live wire and must be connected to the terminal marked [L] or coloured red.

On no account must either the brown or the blue wire be connected to the [EARTH] terminal

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug – disconnect it from the mains – and then cut it off of the mains lead and immediately dispose of it in a safe manner. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

WARNING:

This appliance is double insulated.
Do not connect any wire to the earth terminal.

DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill.

Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



Important Safety Information:

Please read these notes carefully BEFORE using your Tower appliance

- Retain the instructions for future reference
- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- Please ensure that the appliance is used on a stable, level, and heat resistant surface.
- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer, its service agent or a similarly qualified person.
- DO NOT let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- DO NOT carry the appliance by the power cord.
- The use of accessory attachments is not recommended by the appliance manufacturer apart from those supplied with this product.
- DO NOT use extension cords with the appliance.
- DO NOT pull the plug out by the cord as this may damage the plug and/or the cable.
- When pulling the power cord from the retractable unit DO NOT force it beyond the fully extended point.
- Switch off at the wall socket then remove the plug from the socket when not in use or before cleaning.
- Switch off and unplug before fitting or removing tools/ attachments, after use and before cleaning.
- Close supervision is necessary when any appliance is used by or near children.
- Children should not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Cleaning and user maintenance should not be undertaken by children without supervision.
- Take care when any appliance is used near pets.
- DO NOT use this product for anything other than its intended use.
- This appliance is for household use only.
- DO NOT use outdoors or in damp areas.
- DO NOT immerse the unit in water or any other liquid.
- DO NOT allow water or any other liquid to enter the unit.
- DO NOT run the appliance continuously for more than 30 seconds. If the motor stops running due to overheating, disconnect the appliance from the mains and allow to cool down for 20 minutes before using again.
- WARNING: If the scissors, knife or screwdriver blocks the grinding wheel during use, or the grinding wheel does not turn, remove the object to be sharpened from the guide. Turn the knife sharpener off and DO NOT use for at least 20 minutes.
- DO NOT use excessive downwards force on the knife. Only a small amount of pressure is required for best results.
- Caution! DO NOT run fingers along the edges of knives to check sharpness. To avoid injury, handle knives with extreme care.
- DO NOT touch hot surfaces.
- DO NOT place on or near a hot gas or electric burner, or in a heated oven.
- Keep away from flammable materials such as curtains, cloth and paper when operating.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the Customer Support Team:
+44 (0) 333 220 6066

Before First Use:

Read all instructions and safety information carefully before first use. Please retain this information for future reference.

1. Remove the packaging and check for any visible signs of damage to the unit and cord.
2. Wipe the unit with a soft damp cloth. DO NOT use any aggressive detergents, or brushes with metal or nylon bristles.
3. Dispose of the packaging in a responsible manner.

Note: A slight odour may emit from the Electric Knife Sharpener during first use. This is normal and will cease with continued use.

Using Your Appliance:

This appliance is suitable for sharpening knives, scissors and screw drivers.

IMPORTANT! DO NOT add water or other liquid when sharpening a knife, scissors or screw driver. Adding liquid can cause an electric shock.

Sharpening Knives:

1. Place the knife sharpener on a flat and stable surface.
2. Insert the plug into a mains power outlet.
3. Press the On/Off switch to the 'I' position to turn on the knife sharpener.
4. Hold the handle of the knife and slowly place the cutting edge of the blade into the required sharpening guide, as close to the handle as possible.
5. Carefully draw the knife slowly back towards you until the tip of the knife has reached the edge of the guide.
6. Repeat the sharpening process 3-4 times.

Note: DO NOT use excessive downwards force on the knife. Only a small amount of pressure is required for best results.

7. It is recommended to sharpen each side of the blade equally. If coarse sharpening, use both the inner and outer guide slots on the left of the knife sharpener (Fig.1). If fine sharpening, use both the inner and outer guide slots on the right side of the product (Fig.2).
8. Once you have finished sharpening the knife, press the On/Off switch to the 'O' position to turn off the knife sharpener. Unplug from the mains and press and hold the auto retractable cord button to wind the cord for storage.



Fig. 1

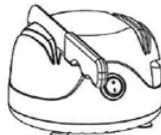 


Fig. 2



Sharpening Guides:

Use the coarse sharpening guide before the fine sharpening guide if the knife is very dull. If the knife is not particularly dull, there is no need to use the coarse sharpening guide first.

 
Sharpening Scissors:

1. Place the knife sharpener on a flat and stable surface.
2. Insert the plug into a mains power outlet.
3. Press the On/Off switch to the 'I' position to turn on the knife sharpener.
4. Hold the scissors by the handles. For extra stability, hold the knife sharpener with one hand, ensuring your hand is away from the blade and sharpening motion.
5. Open the scissors and place one blade inside the scissor sharpening guide slowly.
6. Place the sharp edge of the scissors upwards. Carefully and slowly draw the edge of the scissors along the incline of the guide, making contact with the grinding wheel.
7. Repeat the sharpening process 4-5 times.

Note: Only a small amount of pressure is required for best results.

8. Adjust the angle between the scissors and the incline of the guide according to the thickness and size of the scissors.


9. Repeat the process for the other scissor blade.
10. Once you have finished sharpening the scissors, press the On/Off switch to the '0' position to turn off the knife sharpener. Unplug from the mains and press and hold the auto retractable cord button to wind the cord for storage.

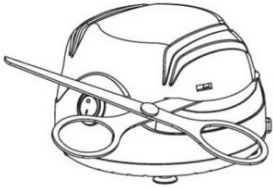

Sharpening Screwdrivers:

Note: Only sharpen flat head screwdrivers.

 1. Place the knife sharpener on a flat and stable surface.
2. Insert the plug into a mains power outlet.
3. Press the On/Off switch to the 'I' position to turn on the knife sharpener.
4. With one hand holding the handle of the screw driver, hold the knife sharpener firmly for extra stability.
5. Use the coarse sharpening guide before the screwdriver slot if the screwdriver head is misshapen. Place the screw driver head into the groove to make contact with the grinding wheel. Then repeat on the other side of the screw driver head.
6. Insert the head of the screwdriver into the screwdriver slot until it makes contact with the grinding wheel.
7. Repeat on both sides of the head.
8. Once you have finished sharpening the screwdriver, press the On/Off switch to the '0' position to turn off the knife sharpener. Unplug from the mains and press and hold the auto retractable cord button to wind the cord for storage.

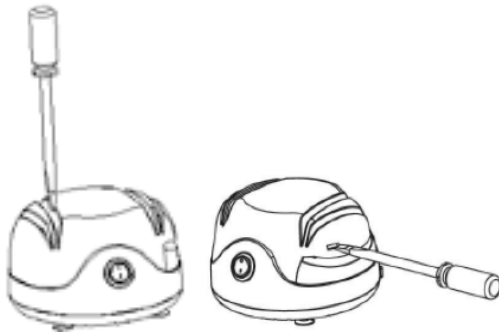

Rest Times:

DO NOT use the knife sharpener for more than 30 seconds at a time.

After 30 seconds of continuous use, rest the knife sharpener for 20 minutes before next use.

Grinding Wheel:

- The grinding wheel may produce some sparks during use. This is normal.
- If the scissors, knife or screwdriver blocks the grinding wheel during use, or the grinding wheel does not turn, remove the object to be sharpened from the guide. Turn the knife sharpener off and do not use for at least 20 minutes.
- Failure to do so may result in damage to the appliance.

The auto re-wind function:

- After use, unplug from mains power outlet first and then press and hold the cord rewind button, the cord will wind back automatically. If the cord fails to rewind, then hold the power cord and press and hold the cord rewind button, the cord will rewind slowly.

IMPORTANT! When the power cord is pulled out, do not force beyond the fully extended point or this can cause damage to the power cord.

Tips:

- Pull the knife or scissor blade along the groove at an even speed for more productive sharpening.
- Adjust the angle of the knife when using the guide to ensure the edge of the blade sits flush against the grinding wheel.
- To create more stability, hold the knife sharpener with one hand during use, ensuring your hand is away from the blade and sharpening motion.

Troubleshooting:

Problem	Solution
The Electric Knife Sharpener won't turn on.	Check that the plug is plugged into the correct outlet and switched on. Check that there is power to the outlet by testing another appliance.
The Electric Knife Sharpener produces sparks when I sharpen knives.	It is normal for the grinding wheel to produce sparks when sharpening some knives.
When should I use the coarse and fine sharpening guides?	Choose the fine or coarse sharpening guides depending on the required sharpness of the blade edge. Duller knives may need to be sharpened with the coarse guide prior to using the fine sharpening guide.
The Electric Knife Sharpener is hot during use.	Only use the Knife Sharpener for 30 seconds at a time. If the Knife Sharpener is used for more than 30 seconds continuously, it will overheat – make sure you unplug the Knife Sharpener and leave it to rest for at least 20 minutes after every 30 second cycle.

Cleaning & Care:

- Turn the unit off to the '0' position, unplug the appliance and wait for it to completely cool down before cleaning.
- Clean the Electric Knife Sharpener with a dampened cloth and polish with a soft dry cloth.
- Do not immerse in water or any other liquid.

IMPORTANT! Allow to dry fully after cleaning before using again.

- DO NOT use the appliance if damp.

Storage:

To store your appliance:

1. Unplug the power cord from the power outlet and clean as above.
2. Allow the appliance to dry fully.
3. Store in a cool, dry place out of reach of children.

NOTES:

NOTES:

NOTES:

TOWER®

over 100 YEARS of quality

thank you!

We hope you enjoy your appliance for many years.

This product is guaranteed for 12 months from the date of original purchase. If any defect arises due to faulty materials or workmanship, the faulty products must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

The Following Conditions Apply:

The product must be returned to the retailer with proof of purchase or a receipt. The product must be installed and used in accordance with the instructions contained in this instruction guide.

It must be used only for domestic purposes.

It does not cover wear and tear, damage, misuse or consumable parts.

Tower has limited liability for incidental or consequential loss or damage.

This guarantee is valid in the UK and Eire only.

The standard one year guarantee is only extended to the maximum available for each particular product upon registration of the product within 28 days of purchase. If you do not register the product with us within the 28 day period, your product is guaranteed for 1 year only.

To validate your extended warranty, please visit
www.towerhousewares.co.uk and register with us online.

Please note that length of extended warranty offered is dependent on product type and that each qualifying product needs to be registered individually in order to extend its warranty past the standard 1 year.

Extended warranty is only valid with proof of purchase or receipt.

Your warranty becomes void should you decide to use non Tower spare parts.

Spare parts can be purchased from

www.towerhousewares.co.uk

Should you have a problem with your appliance, or need any spare parts, please call our Customer Support Team on:

+44 (0) 333 220 6066

