

TOWER®

over 100 YEARS of quality

10 Cup Coffee Maker

Applicable to all colour variants



3 | YEAR
GUARANTEE



GREAT BRITISH
DESIGN SINCE 1912

SAFETY AND INSTRUCTION MANUAL
PLEASE READ CAREFULLY

*Subject to registering your Extended Guarantee online at www.towerhousewares.co.uk.



Towerbrand

GREAT BRITISH DESIGN, INNOVATION
AND EXCELLENCE SINCE 1912

Since the turn of the 20th century, Tower has been designing, developing and manufacturing housewares and small appliances used by millions of households throughout the UK and beyond. During the 1960s, the rise in popularity of pressure cooking saw Tower become the UK's largest producer of pressure cookers, right through into the late 1980s. In recent years the Tower brand has been reborn with an exciting and varied range of housewares and electrical appliances that have quickly reinstated the brand's richly deserved status as a household name.

TOWER

Visit

www.towerhousewares.co.uk

for more fantastic products.

Thank you for purchasing this appliance from the Tower range.

Please read this manual carefully **BEFORE** using the appliance for your own safety.

It has been designed to provide many years of trouble-free use.

There are many benefits to using a Tower Coffee Maker:

- Easy to use – just fill with water and your favourite coffee blend
- Permanent washable mesh filter with integrated handle
- Makes 10 cups of fresh coffee at a time
- The warming plate keeps your coffee at the perfect temperature
- Anti-drip device allows the jug to be removed at any time
- 1.25 litre capacity tank

Contents:

1. **Specifications**
Components and structure
2. **Technical Data**
3. **Important Safety Information**
4. **Before First Use**
5. **Using your Appliance**
6. **Troubleshooting**
7. **Recycling**
8. **Cleaning & Care**
9. **Wiring Safety**
10. **Warranty Information**
11. **Your Receipt**

See back page for Customer Service Information.

Call us first, we can help.

With advice, spares and returns.

Visit our website: **Call: +44 (0)333 220 6066**
towerhousewares.co.uk (8.30am to 6.00pm Monday-Friday)

1 - Specifications:

This box contains:

Instruction Manual
Coffee Maker
Carafe
Filter Mesh Basket Housing
Filter Mesh



Structure of your appliance:

- | | |
|-------------------------------|------------------|
| 1. Top Cover | 5. Heating Plate |
| 2. Filter Mesh Basket Housing | 6. Water Tank |
| 3. Filter Mesh Basket | 7. Water Gauge |
| 4. Carafe | 8. Power Switch |

2 - Technical Data:

Description: 10 Cup Coffee Maker
Model: T13006
Rated Voltage: 220-240V 50-60Hz
Power Consumption: 900W

Documentation

We declare that this product conforms to the following product legislation in accordance with the following directive(s):

2014/30/EU	Electromagnetic Compatibility Directive.
2014/35/EU	Low Voltage Directive.
2011/65/EU	Restriction of Hazardous Substances Directive.
1935/2004/EC	Materials & Articles in Contact With Food (LFGB section 30 & 31).
2009/125/EC	Eco-Design of Energy Related Products.

RK Wholesale LTD Quality Assurance, United Kingdom.

Should you encounter problems or require a replacement part, contact the Tower Customer Support Team: **+44 (0) 333 220 6066**.

Some spare parts may be ordered from the Tower website.
Your warranty becomes void should you decide to use non Tower spare parts.
Spare parts can be purchased from **www.towerhousewares.co.uk**

Guarantee for spare parts:

The spares and accessories are guaranteed for 1 year from date of purchase.
The main body and housing are guaranteed for the extended free warranty subject to registration.
If any defect arises due to faulty materials or workmanship, the faulty products must be returned to the place of purchase within 12 months from the date of purchase.
Refund or replacement is at the discretion of the retailer.

3 - Important Safety Information:

Please read these notes carefully BEFORE using your Tower appliance

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer, its service agent or a similarly qualified person.
- DO NOT let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- DO NOT carry the appliance by the power cord.
- The use of accessory attachments is not recommended by the appliance manufacturer apart from those supplied with this product. DO NOT use extension cords with the appliance.
- DO NOT pull the plug out by the cord as this may damage the plug and/or the cable.
- Switch off at the wall socket then remove the plug from the socket when not in use or before cleaning.
- Switch off and unplug before fitting or removing tools/ attachments, after use and before cleaning.
- Close supervision is necessary when any appliance is used by or near children.
- Children should not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the

appliance in a safe way and understand the hazards involved.

- Cleaning and user maintenance should not be undertaken by children without supervision.
- Take care when any appliance is used near pets.
- DO NOT use this product for anything other than its intended use.
- This appliance is for household use only.
- DO NOT spill liquid onto the base unit. If this happens switch off and unplug from the mains, mop up the liquid and seek advice from a qualified technician.
- This appliance is not intended for commercial use.
- DO NOT use the glass coffee pot with any other hotplate.
- DO NOT use the glass coffee pot on an oven hob to heat.

- Always ensure that the lid is tightly closed and that you avoid the steam plume.
- Use only cold water when filling the device.
- DO NOT touch the coffee pot surface when the appliance is used, use the handle.
- DO NOT use the appliance if the glass coffee pot is cracked.
- The water level must be between the MAXIMUM and MINIMUM mark.
- DO NOT sit the product under cupboards or near hanging fabric.
- DO NOT use a separate timer or separate remote device.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the Customer Support Team:
+44 (0) 333 220 6066

4 - Before First Use

1. Remove the parts from the packaging.
2. Prior to initial use, fill the coffee maker with water to the maximum mark, then run it once without using any coffee.
3. Your appliance is now ready for normal use.
4. Dispose of the packaging in a responsible manner.

5 - Using Your Appliance

Brewing Your Coffee:

1. Open the top lid and fill the water tank with drinking water.

Note: Do not exceed the MAX LEVEL as indicated on the water tank.

2. Place the brewing basket into the filter cavity and make sure it is correctly fitted into place. If necessary, place a coffee filter into the brewing basket.
3. Add coffee powder to the brewing basket or coffee filter. Usually a cup, or two cups of coffee, uses three spoons of powder, three cups needs five spoons, and four cups needs six spoons of coffee powder, but you may adjust according to personal taste.
4. Replace the top lid.

Note: The appliance will not work unless the top lid is closed and in its correct position.

5. Insert the glass carafe onto the warming plate horizontally, ensuring the centre line of the carafe aligns with the anti-drip valve.
6. Plug the coffee machine into the mains and push the 'On' button to start the brewing process. The button will illuminate to indicate the unit has been powered on.

Note: During the brewing process, you can press the "Start" button again if you want to make the appliance stop working. However, it is better to avoid stopping the unit during brewing process.

To continue brewing after pausing the cycle, you must first open the top lid and then close it again to make the appliance continue operating.

WARNING! Do not open the top lid during the brewing process to avoid scalding.

The Keep-Warm Function:

During the brewing cycle, coffee will flow into the glass carafe from the coffee outlet. The appliance will automatically stop operating and switch to 'keep-warm' mode after it has finished brewing.

Note: The keep-warm function is applicable for a maximum of 40 minutes. After this time, the appliance will cut off automatically. The indicator light on the "Start" button will go out to indicate the unit has stopped working.

The Pause-And-Pour Function:

The appliance is designed with a pause-and-pour feature letting you temporarily remove the glass carafe at any time during the brewing cycle without interrupting it or causing coffee to drip from the appliance. To restart the brewing cycle after making use of this feature, simply replace the glass carafe onto the warming plate.

Note: The pause-and-pour feature is applicable for a maximum of 30 seconds. Removing the carafe for longer than 30 seconds will cause the coffee to overflow the filter, leading to spillages.

CAUTION! Never return the empty glass carafe onto the warming plate when it is still warm.

Serving Your Coffee:

When the unit has finished brewing, remove the glass carafe to serve. For great-tasting coffee, pour directly after brewing.

Note: The volume of coffee brewed will be less than the amount of water first added as some water will be absorbed during the brewing process.

CAUTION! When pouring, do not angle the carafe beyond a safe angle. We recommend no more than 45 degrees from the vertical position. Pour the coffee slowly until the glass carafe is empty, to prevent the coffee from rushing into the lid and flowing out from both edges of the lid. This will help avoid spillages and minimise the risk of scalding.

Always turn the coffee maker off and unplug it from the mains when not in use.

Hints For Great Tasting Coffee:

1. A clean coffee maker is essential for making great-tasting coffee. Regularly clean the coffee maker as specified in the "CLEANING AND MAINTENANCE" section. Always use fresh, cold water in the coffee maker.
2. Store unused coffee powder in a cool, dry place. After opening a packet of coffee powder reseal it tightly and store it in a refrigerator to maintain its freshness.
3. For an optimum coffee taste, buy whole coffee beans and finely grind them just before brewing.
4. Do not reuse coffee powder since this will greatly reduce the coffee flavour.
5. Reheating coffee is not recommended as coffee is at its peak flavour immediately after brewing.
6. Over-extraction will eventually cause your coffee maker to become oily, and small oil droplets to appear on the surface of brewed, black coffee as a result. When this occurs, clean your coffee maker as detailed in the 'Cleaning and Care' section below.
7. The use of heavily roasted coffees increases the likelihood of the coffee maker becoming oily.

6 - Troubleshooting

Questions	Answers
What kind of coffee shall I use?	Any ground coffee! You can buy pre-ground coffee for filter machines from supermarkets in a variety of different flavours and blends, grind your own coffee beans, or buy beans from your favourite coffee shop and ask for them to be ground to filter consistency.
How do I clean the filter?	The filter can be washed in warm water. Ensure the filter is fully dry before placing it back into the coffee maker.
Can I put the carafe in the microwave?	No. NEVER put the carafe in the microwave, dishwasher or on a hotplate.
The unit does not work.	Ensure the unit is plugged into the mains and that the 'On' button is illuminated.
My coffee has an odd taste.	This may result from oil residue in your coffee maker. Clean your coffee maker to dispose of any residue, then try brewing a fresh batch of coffee.

7 - Recycling

DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.wEEEireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill.

Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



8 - Cleaning & Care

CAUTION! Always unplug this appliance and let it cool down completely before cleaning. To protect against electrical shock, do not immerse the cord, plug or unit in water or liquid.

1. Clean all detachable parts such as the inner cover, brewing basket or water tank with warm water. Clean the small brush at one end of the cleaning spoon after each use.
2. To dispose of residual water, push the anti-drip valve upwards 3-4 times.
3. Wipe the outside of the product and the warming plate with a soft, damp cloth to remove stains. NEVER use chemicals or abrasive cleaners, as these could cause damage to the surface.
4. Water droplets may build up in the area above the brewing basket and drip onto the product base during brewing. To control dripping, wipe the relevant area with a clean, dry cloth after each use.
5. Replace all parts before your next use.

Removing Mineral Deposits:

Important: To keep your coffee maker operating efficiently, you should periodically clean away scale deposits resulting from hard water or frequent use.


We recommend removing mineral deposits as follows:

1. Fill the tank with water and household de-scaler to the max level as indicated on the water tank. The proportion of water to de-scaler should be roughly 4:1. Make sure you refer to the instructions that come with your descaling product. Alternatively, you can use citric acid, at a scale of approximately 33:1.
2. Insert the glass carafe onto the warming plate.
3. Make sure the brewing basket is clear of coffee beans or powder and placed correctly inside the unit.
4. Switch the appliance on and allow it to "brew" the de-scaling solution.
5. After 'brewing' one cup of the de-scaling solution, switch off the appliance.
6. Leave the solution to stand for 15 minutes, then repeat steps 3-5.
7. After 2-3 brewing cycles, run off the solution until the water tank is completely empty, then fill the appliance with water only and brew a further 2-3 cycles. This will ensure that all de-scaler is flushed from the unit, and that it is ready for your next use.

To store your appliance:

1. Unplug the power cord from the power outlet and clean as above.
2. Allow the appliance to dry fully.
3. Store on a flat, dry level surface out of reach of children.

9 - Wiring Safety for UK Use Only

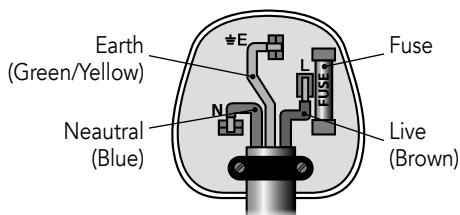

IMPORTANT

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are labelled in accordance with the following code:

**Blue neutral [N] Brown live [L]
Green/Yellow [EARTH] **

Plug Fitting Details (Where Applicable). The wire labelled blue is the neutral and must be connected to the terminal marked [N].

The wire labelled brown is the live wire and must be connected to the terminal marked [L].

The wire labelled green/yellow must be connected to the terminal marked with the letter [E].

On no account must either the brown or the blue wire be connected to the [EARTH] terminal.

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - disconnect it from the mains - then cut it off of the mains lead and immediately dispose of it in a safe manner. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

WARNING:
This appliance **MUST** be earthed!

10 - Warranty

**3* | YEAR
GUARANTEE**



**GREAT BRITISH
DESIGN SINCE 1912**

As a thank you for purchasing one of our fantastic products, we are offering you an extra 2 years peace of mind in addition to your 1 year guarantee.

To receive your extra 2 year guarantee, register your appliance online within 28 days of purchase by visiting www.towerhousewares.co.uk



This product is guaranteed for 12 months from the date of original purchase. If any defect arises due to faulty materials or workmanship, the faulty products must be returned to the place of purchase. Refund or replacement is at the discretion of the retailer.

The Following Conditions Apply:

- The product must be returned to the retailer with proof of purchase or a receipt.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- Tower has limited liability for incidental or consequential loss or damage.

This guarantee is valid in the UK and Eire only.

The standard one year guarantee is only extended to the maximum available for each particular product upon registration of the product within 28 days of purchase. If you do not register the product with us within the 28 day period, your product is guaranteed for 1 year only.

To validate your extended warranty, please visit www.towerhousewares.co.uk and register with us online.

Please note that length of extended warranty offered is dependent on product type and that each qualifying product needs to be registered individually in order to extend its warranty past the standard 1 year. Extended warranty is only valid with proof of purchase or receipt.

11 - Your Receipt

Affix your store receipt to this page for safe keeping.

TOWER®

over 100 YEARS of quality

thank you!

We hope you enjoy your appliance for many years. As a thank you for purchasing one of our fantastic products, we are offering you an extra 2 years peace of mind.

*To receive your extra 2 years guarantee, register your appliance online within 28 days of purchase by visiting:

www.towerhousewares.co.uk

Should you have a problem with your appliance, or need any spare parts, please call our Customer Support Team:

+44 (0) 333 220 6066

Your warranty becomes void should you decide to use non Tower spare parts.
Spare parts can be purchased from
www.towerhousewares.co.uk



0620.V2