

TOWER[®]

over 100 YEARS of quality

T134000BLG

RHS10 Handheld Steam Cleaner



SAFETY AND INSTRUCTION MANUAL
PLEASE READ CAREFULLY

*Subject to registering your Extended Guarantee online at www.towerhousewares.co.uk.



Towerbrand

GREAT BRITISH DESIGN, INNOVATION
AND EXCELLENCE SINCE 1912

Since the turn of the 20th century, Tower has been designing, developing and manufacturing housewares and small appliances used by millions of households throughout the UK and beyond. During the 1960s, the rise in popularity of pressure cooking saw Tower become the UK's largest producer of pressure cookers, right through into the late 1980s. In recent years the Tower brand has been reborn with an exciting and varied range of housewares and electrical appliances that have quickly reinstated the brand's richly deserved status as a household name.

TOWER

Visit

www.towerhousewares.co.uk

for more fantastic products.

Thank you for purchasing this appliance from the Tower range.

Please read this manual carefully BEFORE using the appliance for your own safety.

It has been designed to provide many years of trouble-free use.

There are many benefits to using a Tower Handheld Steam Cleaner:

- 1050W of power helps keep the germs at bay
- Generous 250ml capacity
- 10 Minutes of continuous steam
- Heats up in 3 minutes
- 3 Metre Cable
- Lightweight design
- 9 Accessories included

Contents:

1. **Specifications**
Components and structure
2. **Technical Data**
3. **Important Safety Information**
4. **Before First Use**
5. **Using your Appliance**
6. **Troubleshooting**
7. **Recycling**
8. **Cleaning & Care**
9. **Wiring Safety**
10. **Warranty Information**
11. **Your Receipt**

See back page for Customer Service Information.

Call us first, we can help.


With advice, spares and returns.

Visit our website: towerhousewares.co.uk Call: +44 (0)333 220 6066
(8.30am to 6.00pm Monday-Friday)

1 - Specifications:

This box contains:

- Instruction Manual
- Handheld Steamer
- Flexible Hose
- Fabric Steamer
- Long Nozzle Adaptor
- Angled Nozzle
- Squeegee
- Nylon Brush
- Funnel
- Measuring Cup
- Microfibre Cloth for the Fabric Steamer

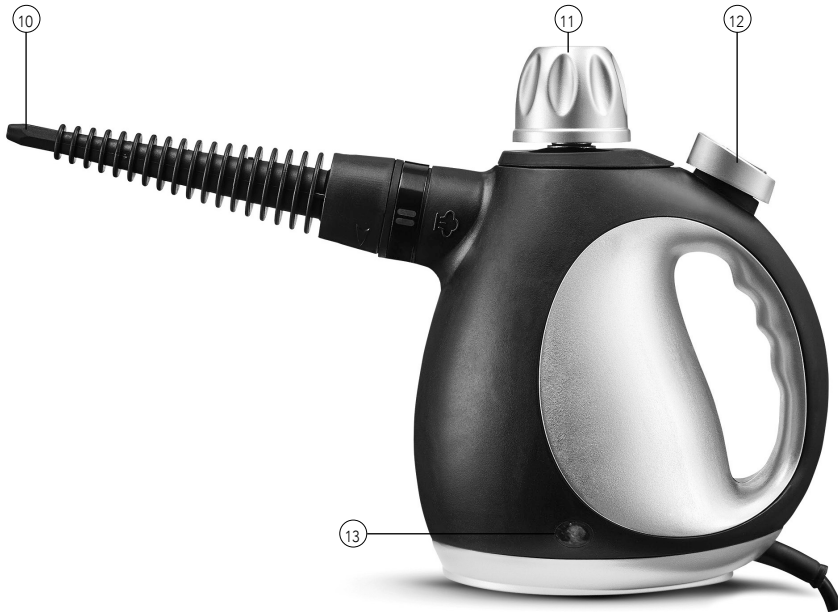

Structure of your appliance:

- | | |
|--|------------------------|
| 1. Microfibre Cloth for the Fabric Steamer | 8. Long nozzle adaptor |
| 2. Squeegee | 9. Nylon brush |
| 3. Measuring cup | 10. Short spray nozzle |
| 4. Funnel | 11. Safety cap |
| 5. Fabric steamer | 12. Steam button |
| 6. Flexible hose | 13. Power indicator |
| 7. Angled nozzle | |

2 - Technical Data:

Description:	Handheld Steam Cleaner
Model:	T134000BLG
Input:	220-240V ~50/60Hz
Power Consumption:	900 - 1050W
Steam pressure:	2.6-3.2 bar

Documentation

We declare that this product conforms to the following product legislation in accordance with the following directive(s):

2014/30/EU	Electromagnetic Compatibility Directive.
2014/35/EU	Low Voltage Directive.
2011/65/EU	Restriction of Hazardous Substances Directive.
2009/125/EC	Eco-Design of Energy Related Products.

RK Wholesale LTD Quality Assurance, United Kingdom.

Should you encounter problems or require a replacement part, contact the Tower Customer Support Team: **+44 (0) 333 220 6066**.

Some spare parts may be ordered from the Tower website.
Your warranty becomes void should you decide to use non Tower spare parts.
Spare parts can be purchased from **www.towerhousewares.co.uk**

Guarantee for spare parts:

The spares and accessories are guaranteed for 1 year from date of purchase.
The main body and housing are guaranteed for the extended free warranty subject to registration.
If any defect arises due to faulty materials of workmanship, the faulty products must be returned to the place of purchase within 12 months from the date of purchase.
Refund or replacement is at the discretion of the retailer.

3 - Important Safety Information:

Please read these notes carefully BEFORE using your Tower appliance.

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer, its service agent or a similarly qualified person.
- DO NOT let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- DO NOT carry the appliance by the power cord.
- DO NOT use any extension cord with this appliance.
- DO NOT pull the plug out by the cord as this may damage the plug and/or the cable.
- Switch off at the wall socket then remove the plug from the socket when not in use or before cleaning.
- Switch off and unplug before fitting or removing tools/ attachments, after use and before cleaning.
- Close supervision is necessary when any appliance is used by or near children.
- Children should not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance should not be undertaken by children without supervision.

- Take care when any appliance is used near pets.
- DO NOT use this product for anything other than its intended use.
- DO NOT immerse cords, plugs or any part of the appliance in water or any other liquid.
- This appliance is for household use only.
- DO NOT use the appliance outdoors.
- Use only manufacturer's recommended accessories.
- DO NOT pull cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the Customer Support Team:
+44 (0) 333 220 6066

4 - Before First Use

1. Remove the product from the box.
2. Remove any packaging from the product.
3. Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.
4. Dispose of the packaging in a responsible manner.

5 - Using Your Appliance

Filling the tank with water:

1. To use this handheld steamer, start by filling up the water tank.
2. To access the water tank, remove the safety cap at the top of the unit by turning it counter-clockwise to loosen it. Once it has come fully loose, pull it away from the body of the unit and set it to one side.
3. Place the included funnel on the water tank opening and use the included measuring cup to carefully pour water into the tank. Be careful not to put in more water than necessary, to avoid waste.
4. Once the water tank has been filled with the required quantity of water, replace the safety cap and turn it clockwise to tighten and secure the water inside the tank.

Turning the Unit On and Off:

1. When the unit has been filled with water, plug it into the mains. The LED indicator at the side of the unit will light up amber to indicate the unit has been plugged in and is heating up.
 2. When the unit has reached the correct temperature for steaming, the amber LED indicator on the side of the unit will go out. This indicates the unit is ready for normal use.
- Note: The unit will typically take 3- 5 minutes to heat up.
3. When the unit has heated up and is ready to use, push the On/Off switch on the handle to the On position and press down on the steam trigger to begin steaming. Steam will emit from the nozzle to indicate the unit has been turned on.
 4. Release the switch and de-press the trigger at any time to stop steaming. The switch will automatically return to the Off position and steam will stop emitting from the nozzle to indicate the unit has been turned off.

Using the Accessories:

This unit comes complete with a variety of accessories, for added versatility when steaming.

The full list of attachable accessories included with the unit is as follows:

Extension hose	For added reach when cleaning large garments or carpeting.
Fabric steaming tool	For everyday garment steaming.
Microfibre cloth	For use with the fabric steaming tool.
Long nozzle attachment	For disinfecting and sterilising garments.
Nylon brush	To remove stains from clothing.
Squeegee	To clean glass surfaces.
Angled nozzle	For steaming at hard-to-reach angles.
Funnel	For use when filling up the water tank.
Measuring cup	For accurate measuring when filling up the water tank.

6 - Troubleshooting

Problem	Solution
The steamer is not working.	<ul style="list-style-type: none">· Make sure the unit is plugged into the mains.· Make sure the LED indicator at the side of the unit is not lit up. If this indicator is lit up, the unit is still heating up. Wait until the LED indicator has turned off before attempting to use the unit.
The steamer is on and hot but no steam is coming out	<ul style="list-style-type: none">· Make sure the On/Off switch is pushed to the On position and the steam trigger is being pressed down.
The steamer is taking too long to heat up.	<ul style="list-style-type: none">· The unit may need de-scaling. Follow the de-scaling instructions in the Cleaning and Care section of this manual to de-scale the steamer.

7 - Recycling

DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeeiireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill.

Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



8 - Cleaning & Care

Cleaning The Outside and Base Unit:

1. Remove the plug from the mains socket and allow the appliance to cool down before cleaning.
2. Do not immerse the unit or plug/power cord in water or any other liquid.
3. Clean the outside of the appliance by wiping it with a damp cloth. A little detergent can be added if needed.
4. Do not use scouring pads, steel wool, any form of strong solvents or abrasive cleaning agents to clean the appliance, as they may damage the outside surfaces.

WARNING: Never pour liquid cleaners for eliminating calcium into the water tank.

De-Scaling:

IMPORTANT! Failure to de-scale your steamer may invalidate your guarantee. If you do not de-scale your steamer regularly, the build-up of limescale may result in the following:

- The unit taking longer to heat up.
- Damage to the heating element.

To Minimise Scale Build-Up:

- Empty the unit of water after each use.
- Do not allow water to stand in the unit overnight.
- Use filtered water instead of tap water to help reduce limescale build up.



How To De-Scale:

- Any regular de-scaling agent may be used, provided the relevant instructions are observed. To avoid spillage, DO NOT overfill the unit if the de-scaling agent causes the water to foam.
- To clean the unit thoroughly of any de-calcification residue; let it go through several heating-up cycles using clean water with each cycle. Rinse the unit with clean water afterwards.
- It is advisable to remove limescale deposits from the unit at regular intervals.

Removing Limescale Build-up:

If using a cleaning solution make sure to follow the instructions.

Natural Cleaning Method for Limescale Removal:

- Fill the unit with equal parts water and vinegar (white wine vinegar, cider vinegar or lemon juice work particularly well). Allow the unit to heat up (pay attention that the contents do not boil over) and let it stand for 30-40 minutes.
- When finished empty the unit and rinse it with water.
- The unit should now be free from limescale and ready to be used again.

Storing the Unit:

When not using the unit for extended periods of time, store it in a cool, dry place, preferably inside its original packaging.




WARNING:

Do not immerse any electrical part of the appliance in water such as motor units or plugs.
Please see cleaning section for further instructions.




9 - Wiring Safety for UK Use Only

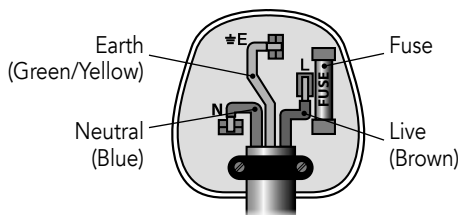

IMPORTANT

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are labelled in accordance with the following code:

Blue neutral [N] Brown live [L]
Green/Yellow [EARTH] 

Plug Fitting Details (Where Applicable).

The wire labelled blue is the neutral and must be connected to the terminal marked [N].

The wire labelled brown is the live wire and must be connected to the terminal marked [L].

The wire labelled green/yellow must be connected to the terminal marked with the letter [E].

On no account must either the brown or the blue wire be connected to the [EARTH] terminal.

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-Rewireable Mains Plug.

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - disconnect it from the mains - then cut it off of the mains lead and immediately dispose of it in a safe manner. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

WARNING:
This appliance **MUST** be earthed!

10 - Warranty



As a thank you for purchasing one of our fantastic products, we are offering you an extra 2 years peace of mind in addition to your 1 year guarantee.

To receive your extra 2 year guarantee, register your appliance online within 28 days of purchase by visiting www.towerhousewares.co.uk



This product is guaranteed for 12 months from the date of original purchase. If any defect arises due to faulty materials or workmanship, the faulty products must be returned to the place of purchase. Refund or replacement is at the discretion of the retailer.

The Following Conditions Apply:

- The product must be returned to the retailer with proof of purchase or a receipt.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, cosmetic damage, misuse or consumable parts.
- Tower has limited liability for incidental or consequential loss or damage.

This guarantee is valid in the UK and Eire only.

The standard one year guarantee is only extended to the maximum available for each particular product upon registration of the product within 28 days of purchase. If you do not register the product with us within the 28 day period, your product is guaranteed for 1 year only.

To validate your extended warranty, please visit www.towerhousewares.co.uk and register with us online.

Please note that length of extended warranty offered is dependent on product type and that each qualifying product needs to be registered individually in order to extend its warranty past the standard 1 year.

Extended warranty is only valid with proof of purchase or receipt.

11 - Your Receipt

Affix your store receipt to this page for safe keeping.

Notes

TOWER®

over 100 YEARS of quality

thank you!

We hope you enjoy your appliance for many years. As a thank you for purchasing one of our fantastic products, we are offering you an extra 2 years peace of mind.

*To receive your extra 2 years guarantee, register your appliance online within 28 days of purchase by visiting:

www.towerhousewares.co.uk

Should you have a problem with your appliance, or need any spare parts, please call our Customer Support Team:

+44 (0) 333 220 6066

Your warranty becomes void should you decide to use non Tower spare parts. Spare parts can be purchased from **www.towerhousewares.co.uk**

